



mydmx GO

User Manual

©2026 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

ADJ Products, LLC and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online.

Please check www.adj.com for the latest revision/update of this manual before beginning installation and/or programming.

Date	Document Version	iOS Version	Android Version	Notes
03/16/2026	1.1	1.12.4	1.0.64	Initial Release

CONTENTS

General Information	4	Moves	27
Safety Guidelines	5	• Choosing an Effect	27
Overview	7	• Center Positioning and Fan	28
Installation	8	Flash FX	29
Hardware Setup	9	Special Controls	30
Connecting a DMX Interface	9	• Gobo Control	30
• MyDMX Go WiFi DMX Interface	9	• Strobe Control	31
• Other ADJ Group Interfaces	10	• Other Dials	31
DMX Interface Configuration	11	Dimmers	32
• MyDMX Go Connection Types	11	Presets	33
• Purchasing Additional SUT Licenses	12	Synchronizing Effects	35
• Synchronizing SUT Licenses	12	• BPM	35
Project Setup	14	• Pulse	36
Managing Your Projects	14	• Ableton Link	36
• Project Synchronization and Sharing	14	MIDI Control	37
• Managing Project Files Locally	15	3d Visualizer	39
• Fixtures Setup	16	Requirements	39
• Fixtures Profile	16	• Checklist	39
• Patching Fixtures	16	Setup	39
• Addressing Your Fixtures	18	• Hardware Setup	39
• Fixture Index	19	• Software Setup	40
• Addressing Fixtures in the 2D View	20	Navigating the 3D Visualizer	41
• Controlling Fixtures Using Faders	21	• 3D Visualizer Configuration	42
• Setting Pan/Tilt Limitations	22		
Live Control	23		
Colors	23		
• Choosing an Effect	23		
• Selecting Your Colors	24		

GENERAL INFORMATION

INTRODUCTION

Please read and understand all instructions in this manual carefully and thoroughly before attempting to operate these products. These instructions contain important safety and use information.

UNPACKING

This device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect the device for damage and be sure all accessories necessary to operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

CUSTOMER SUPPORT

Contact ADJ Service for any product related service and support needs. Also visit forums.adj.com with questions, comments or suggestions.

Parts: To purchase parts online visit:

<http://parts.adj.com> (US)

<http://www.adjparts.eu> (EU)

ADJ SERVICE USA - Monday - Friday 8:00am to 4:30pm PST

Voice: 800-322-6337 | support@adj.com

ADJ SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET

Voice: +31 45 546 85 60 | support@adj.eu

ADJ PRODUCTS LLC USA

6122 S. Eastern Ave. Los Angeles, CA. 90040

323-582-2650 | www.adj.com | info@adj.com

ADJ SUPPLY Europe B.V

Junostraat 2 6468 EW Kerkrade, The Netherlands

+31 (0)45 546 85 00 | www.adj.eu | info@adj.eu

ADJ PRODUCTS GROUP Mexico

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000

+52 (728) 282-7070

LIMITED WARRANTY

For up-to-date warranty information regarding your device, please visit ADJ's warranty information page online or scan the QR codes below.



USA: <https://www.adj.com/pages/warranty-information>



EU: https://www.adj.eu/terms_and_conditions

It is strongly recommended to power the fixture down completely when not in use. Doing so will reduce wear on the fixture due to sustained or extended operational periods, thereby maximizing its operational lifespan.

SAFETY GUIDELINES

To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. ADJ Products, LLC is not responsible for injury and/or damages resulting from the misuse of this device due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this device and only the original rigging parts included with this device should be used for installation. Any modifications to the device and/or the included mounting hardware will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.



THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF, AS DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS DEVICE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.



**DO NOT DISASSEMBLE UNDER ANY CONDITIONS!
UNPLUG POWER DURING LONG PERIODS OF NON-USE
DO NOT EXPOSE DEVICE TO HEAT OR FIRE!
DO NOT EXPOSE DEVICE TO FLAMMABLE MATERIALS!
DO NOT EXPOSE DEVICE TO HIGH HUMIDITY!
DO NOT EXPOSE DEVICE TO EXTREME VIBRATIONS!**



**INDOOR / DRY LOCATIONS USE ONLY!
DO NOT EXPOSE FIXTURE TO RAIN AND/OR MOISTURE!
DO NOT SPILL WATER AND/OR LIQUIDS INTO OR ONTO THE DEVICE!**

AVOID brute force handling when transporting or operating.

DO NOT expose any part of the device to open flame or smoke. Keep device away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

DO NOT use device in extreme and/or severe environments.

DO NOT operate device if power cord is frayed, crimped, damaged and/or if any of the power cord connectors are damaged, and does not insert into the device securely with ease. NEVER force a power cord connector into device. If the power cord or any of its connectors are damaged, replace it immediately with a new one of similar power rating.

Strictly use a source of AC power that complies with local building and electrical codes and has both overload and ground-fault protection. Use only the provided AC power supply and power cords and the correct connector for the country of operation. Use of the factory provided power cable is mandatory for operation in the US and Canada.

Allow free unobstructed airflow to the bottom and back of the product. Do not block the ventilation slots.

DO NOT use the product if the ambient temperature exceeds 50°C (122° F)

SAFETY GUIDELINES

DO NOT attempt installation and/or operation of device without knowledge how to do so.

DO NOT permit operation by persons who are not qualified to operate this type of device.

DO NOT shake device, avoid brute force when installing and/or operating.

DO NOT operate device if the power supply cable has become frayed, crimped and/or damaged, or if any of the connectors do not insert into the device securely with ease.

DO NOT force cable connectors into device.

DO NOT remove or disassemble device, there are NO user serviceable parts inside.

ALWAYS disconnect device from main power source before cleaning.

ALWAYS be sure to use this device in an area that will allow proper ventilation.

ALWAYS disconnect power cable during long periods of non-use.

All cables should be safely routed and secured so they are not likely pinched.

Only use recommended rigging hardware as described in this guide.

Use the original packaging and materials to transport this device in for service.

This device should be serviced by qualified service personnel when:

- The power cord or plug has become damaged.
- Objects have fallen on and/or liquid has spilled into the device.
- The device has been exposed to rain and/or moisture.
- The device does not operate normally or exhibits a marked change in performance.

OVERVIEW



- A. WiFi Antenna
- B. LED Display
- C. DMX Out Signal Indicator (1 and 2)
- D. 3-PIN DMX Out Port 2*†
- E. 3-PIN DMX Out Port 1
- F. Dimmer Button
- G. Up/Down Buttons*
- H. Power/USB/WiFi LED Indicators
- I. Power/USB-C Input
- J. 16 Dry Contact*
- K. Mounting Bracket Knob
- L. Mounting Bracket

* Not active with the myDMX GO app at this time. To activate functions or to add an additional 256 channels, visit store.dmxsoft.com

† 2nd DMX output is only available when using MyDMX3 or Compu Show.

INSTALLATION



FLAMMABLE MATERIAL WARNING!

Keep device at least 5.0 feet (1.5m) away from any flammable materials, decorations, pyrotechnics, etc.

DO NOT INSTALL THE DEVICE IF YOU ARE NOT QUALIFIED TO DO SO!

The myDMX GO WiFi DMX device **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Ambient operating temperature range for this device is **35° to 113°F (2° to 45°C)**.

DO NOT use the device under or above this temperature range.

DO NOT install the device in areas where unauthorized personnel might reach the device.

MINI OMEGA BRACKET / CLAMP INSTALLATION

The myDMX GO WiFi DMX device can be placed on the flat surface, attached to a surface using the provided mounting bracket or attached to a truss using included mini omega bracket and a properly rated clamp. (Clamp not included) (See images below)

INSTALLATION LOCATION ON TRUSS MUST BE CLEAR OF ANY MOVING HEAD FIXTURES!




HARDWARE SETUP

CONNECTING A DMX INTERFACE


MyDMX Go WiFi DMX interface

The MyDMX Go has been specifically designed to be used with the My DMX Go WiFi DMX device. By default, you will be able to connect to your device by using the Access Point created when the device is on. Simply plug your interface into a power source, go to the WiFi settings within your tablet, connect to the “**Smart DMX Interface xxxxxx**” network (where the ‘x’s indicate the serial number of the interface). There are two possible passwords that you can use to connect the device:

- Newer Devices (serial numbers ABOVE 180000): **smartdmx0000**
- Older Devices (serial numbers BELOW 180000): **00000000**

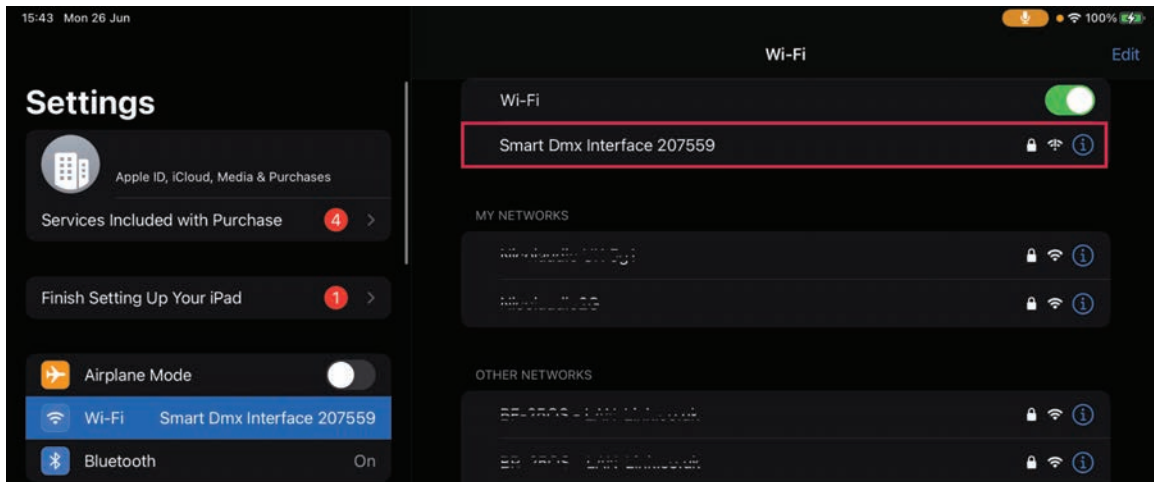

The device may take up to 20 seconds to connect. From there you can launch the MyDMX Go app and log in to your Cloud account (if not already logged in- you will need to create an account if you do not already have one). Once you are signed in, you can go to the Settings screen and connect to the interface by selecting the MyDMX Go in the ‘Controllers’ list on the right side of the screen. If you do not see your device, press the refresh button to the right side of the ‘Controllers’ text. Once connected the device will show as green in the list.

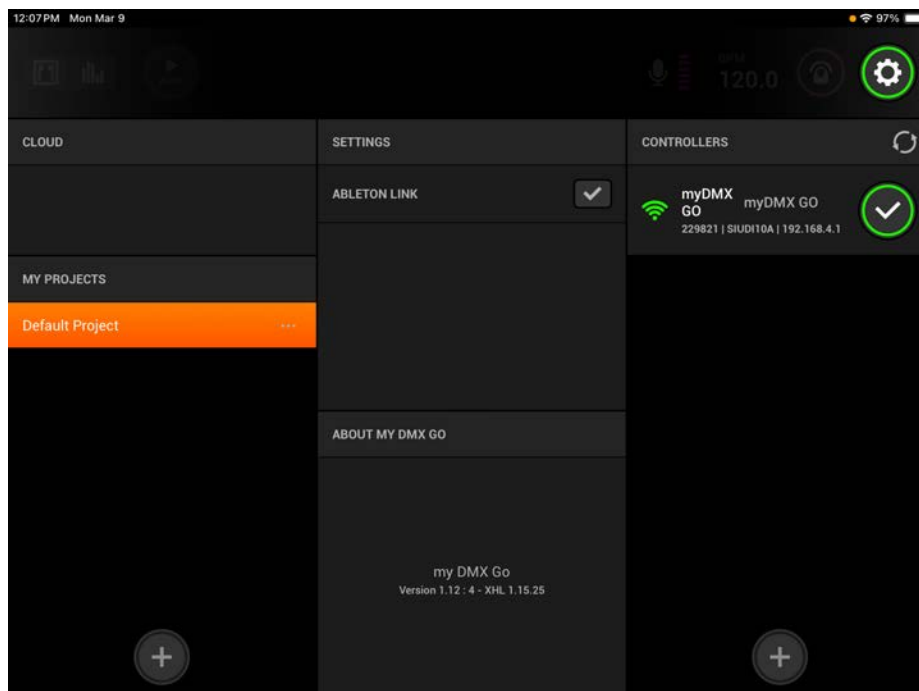

HARDWARE SETUP

Other ADJ Group Interfaces

MyDMX Go can also be used with other devices manufactured by the ADJ Group. In most cases, this will require some additional licence purchases and some different processes to set up.

Android options:

- Any SUT (Smart Upgrade Technology) USB DMX interface can be used with MyDMX Go on Android. You will need to purchase the product licence if this has not already been acquired. You can connect the device to the tablet using an OTG cable, then select the interface in the 'Controllers' list on the Settings screen.
- Any ADJ Group interface that has an Ethernet port can be used with MyDMX Go on Android. Simply connect the device to your network, then connect your tablet to the same network. You should now be able to detect and select the interface in the 'Controllers' list on the Settings screen.

iOS options:

- Any ADJ Group interface that has an Ethernet port can be used with MyDMX Go on iOS. Simply connect the device to your network, then connect your tablet to the same network. You should now be able to detect and select the interface in the 'Controllers' list on the Settings screen.

More information on purchasing licences for your SUT device can be found in the section 'Purchasing additional SUT licences'.

HARDWARE SETUP

DMX INTERFACE CONFIGURATION

MyDMX Go Connection Types

The MyDMX Go device can connect to MyDMX Go over WiFi using two different methods- 'Access Point' and 'Station' mode. It is also possible to have the device set in 'Dual' mode- which means it can use either of these connection methods. The difference between the modes are as follows:


- Access Point: The MyDMX Go device becomes detectable as a network. This will allow you to connect to the MyDMX Go within the tablets WiFi settings, allowing the device to be connected to within the MyDMX Go app. When the tablet is connected to the Access Point, it will not have any internet connection.
- Station: The MyDMX Go connects to a local network. Connecting the tablet to the same network will allow the device to be detected within the MyDMX Go app, allowing you to connect to the device.
- Dual: The device can be connected using either Access Point or Station.

By default, the MyDMX Go will be in Dual mode but it is possible to change to either Access Point or Station mode exclusively using the Hardware Manager tool for Mac and PC. You can download Hardware Manager from the ADJ website. Once you have downloaded and installed Hardware Manager, you can adjust the MyDMX Go settings by completing the following steps:

- Open Hardware Manager.
- Connect your MyDMX Go and select the interface when it appears in the list.
- Select the WiFi tab.

Here you can change the 'WiFi mode' (choose between Access Point, Station, or Dual mode), adjust the specific Access Point settings (network name, password etc.) and connect to an existing network (for use in Station mode).

Hardware Manager can also be used to view information of the device, check the active licences, update the device firmware etc. Please note- your device can only handle a single connection at any one time, so you will need to disconnect from MyDMX Go to connect to Hardware Manager and vice

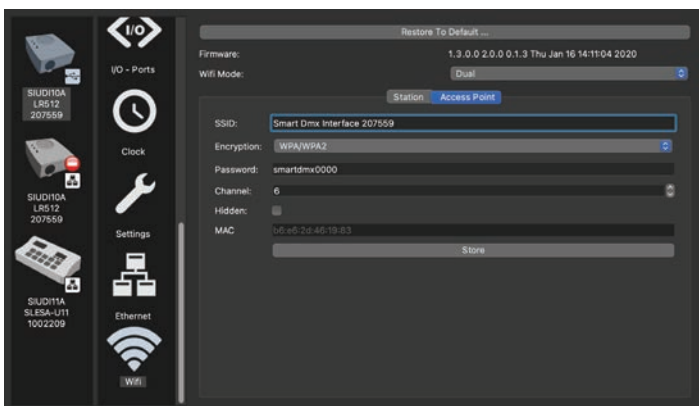


HARDWARE SETUP

Purchasing Additional SUT Licences

Purchasing SUT licences for your device can be done simply via our website store.dmxsoft.com. You can do this by completing the following steps:


1. Download the SUT Tool from the links below:
 - [SUT Tool for Mac.](#)
 - [SUT Tool for Windows.](#)
2. Open the SUT Tool.
3. Connect your DMX interface to your computer.
4. Go to store.dmxsoft.com and navigate to the 'My Interfaces' tab.
5. If applicable, press the 'Register a new interface' button to register your device. There may be a key card required to register the device, which can be found on a plastic card that is packaged with the device.
6. Select the device from the list on the left of the screen.
7. Scroll the list of available licences and purchase the additional licences you require.
8. The SUT Tool should automatically sync your device. If the licence does not appear functional- you can manually sync the device by following the steps outlined in the section 'Synchronising SUT licences'.

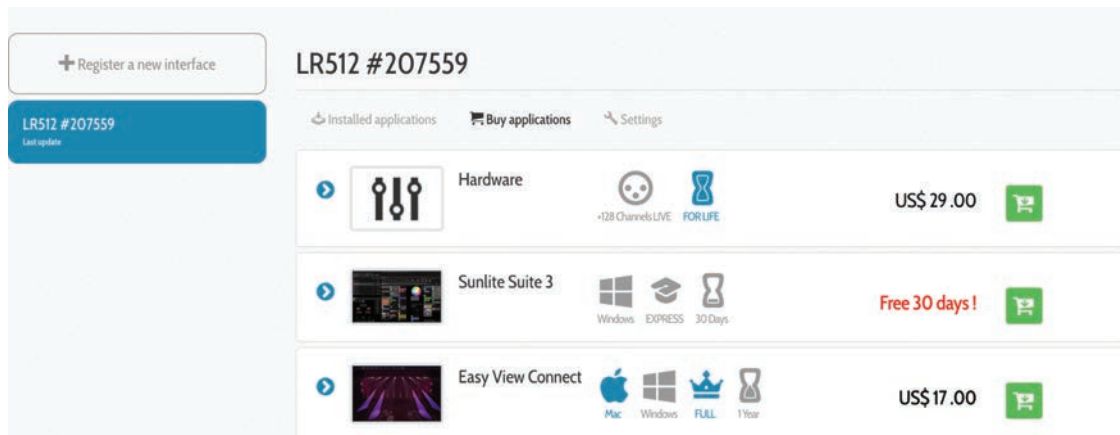

Synchronizing SUT Licenses

If you have purchased a licence on your SUT device from store.dmxsoft.com, the SUT Tool should automatically sync your device for you. However, there are times where you may need to synchronise your interface manually before the licences can be used. To do this [via store.dmxsoft.com](http://store.dmxsoft.com):

1. Go to store.dmxsoft.com then select the 'My Interfaces' tab.
2. Run the SUT Tool.
3. Select your device from the list on the left.
4. Press the 'Synchronise' button on the upper right hand side of the screen.

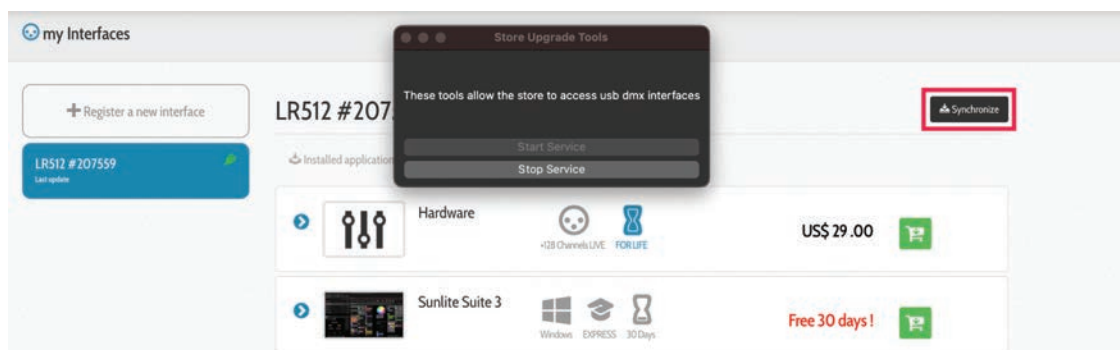


HARDWARE SETUP

Synchronizing SUT Licenses (continued):

To do this via Hardware Manager:

1. Download and install Hardware Manager from the ADJ website.
2. Connect your MyDMX Go Interface and select it from the list on the left.
3. Select the SUT tab.
4. Wait 10-15 seconds for your licence to appear in the 'Licences' list.
5. Once complete, close the Hardware Manager.

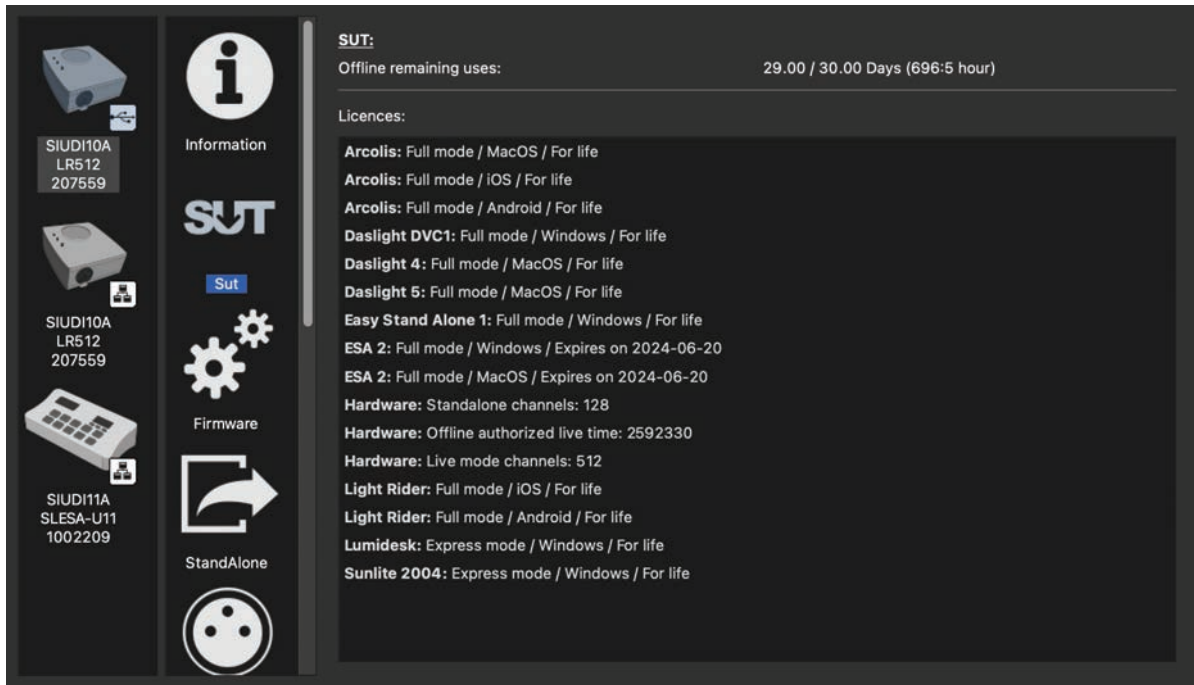

PROJECT SETUP


MANAGING YOUR PROJECTS

Project Synchronization and Sharing


Within the Settings screen, you can find/manage all of your project files as well as create new ones. Your projects will automatically be synced from the Cloud account you are logged into. You can log out/log in to the desired Cloud account from the 'Cloud' section of the Settings screen. Directly below this, is the 'My Projects' section, which will display a list of all local project files stored on your tablet. You can press the 'Refresh' button at the top of the list to manually sync the project files (you will need an active internet connection for this to work).

Project files can be shared to other users over the Cloud via the following steps:

- Go to cloud.nicolaudiegroupp.com.
- Open the 'Files' screen.
- Locate and select the desired project file.
- Press the blue 'Share' button, found to the right of the file name.
- Enter the email address of the Cloud account you want to share the file to, then press the green 'Save' button to confirm.
- Press the pencil icon to edit the specific permissions to allow the user you have shared the file to.

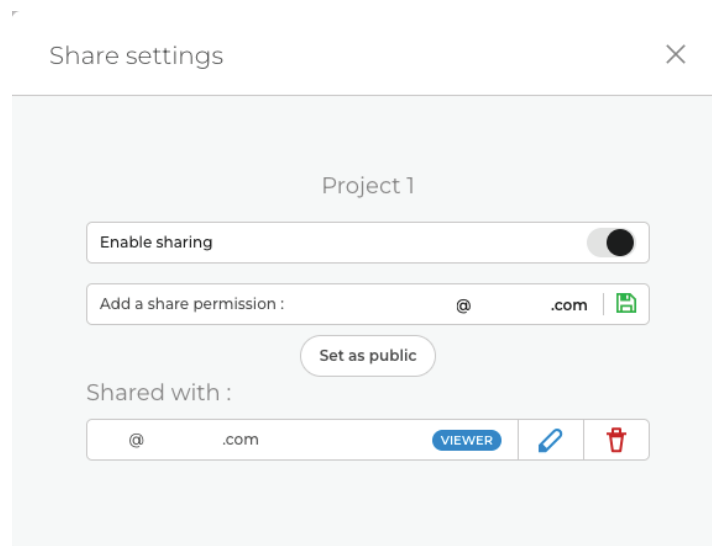


You can also download physical copies of your project files by pressing the blue 'Download' button immediately left of the blue 'Share' button. If you log in or out of a Cloud account on your tablet, you will be asked whether you want to keep the projects on your device, or discard them. This will decide whether your projects are kept locally (on your tablet) or removed. These files will not be removed from the Cloud, so signing back into an account will allow you to re-sync the project files onto your tablet.

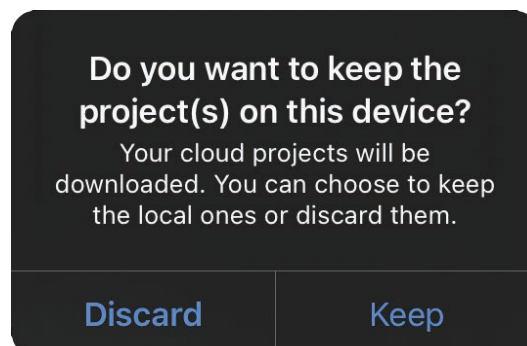

PROJECT SETUP

Managing Project Files Locally

To create a new project within the MyDMX Go app, you can do this by pressing the '+' button at the bottom of the 'Projects' list. Once pressed, you will be prompted to enter a name (this can later be edited). This will open a new and empty project, which will now appear in the list of projects. Pressing the three dots to the right of the project name will allow you to Duplicate, Rename or Delete a project file.

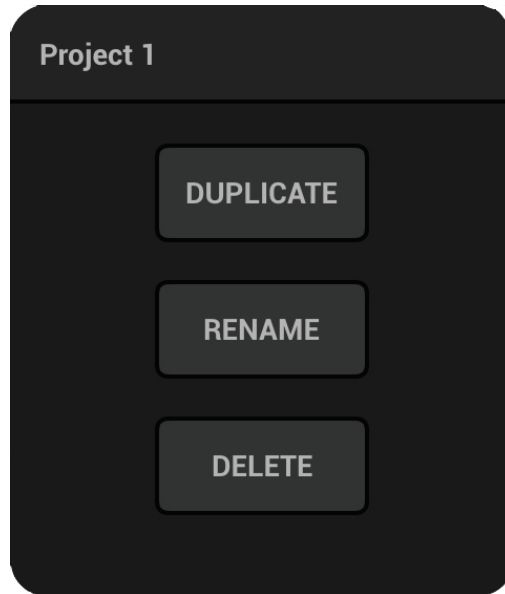

PROJECT SETUP

FIXTURES SETUP


Fixture Profiles

Every light used in MyDMX Go has its own profile. This is called a Fixture Profile or an SSL profile. The profile contains all the information about the lighting fixture (for example, which channel controls the Color, Dimmer etc...). If your fixture profile is not available, you can create it yourself using the online Profile Builder website: profile.nicolaudiegroupp.com. Alternatively, you can request a profile to be built via the website store.lightrider.com/ssl.


If you have an .ssl2 file that you want to add to the MyDMX Go program, you can upload the file to your Cloud account within the Profiles section of the cloud.nicolaudiegroupp.com site.

Patching Fixtures


To start adding fixtures to your project, you will first need to navigate to the Fixtures screen which can be found in the top left corner of the app.

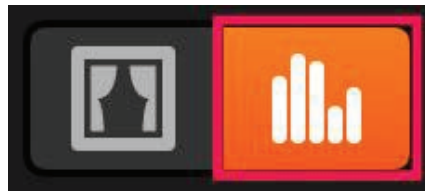

From here, you can press the 'Add fixtures' button (1) to open up the fixture patch screen. You can scroll through the brands via the list on the left, then select the specific fixture profile via the list on the right. It is also possible to search for a brand or profile using the search bar (2) at the top.

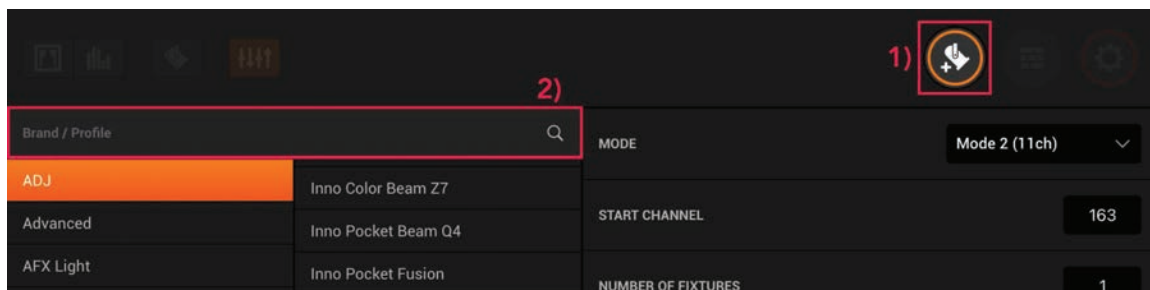


Viewing the full fixture library will require an active internet connection at first. Once a fixture has been selected however, it will now be cached within the app- making it viewable and patchable even when disconnected from the internet. Any 'cached' fixture will be indicated by a blue dot to the right of the profile name.

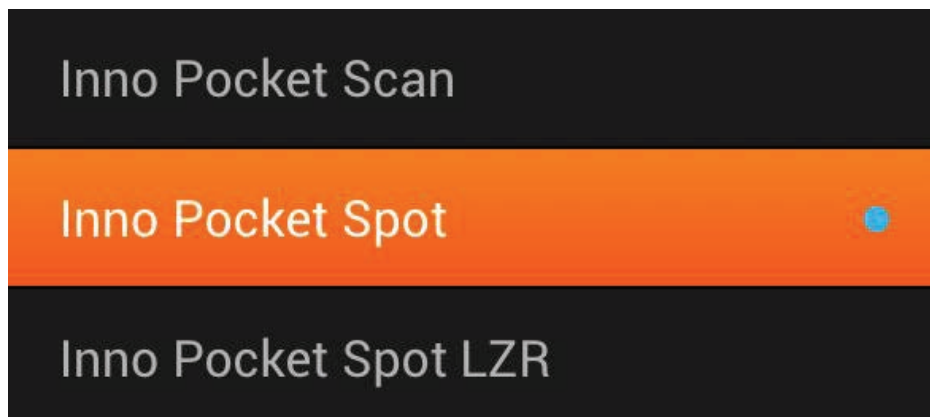

PROJECT SETUP

To patch a selected fixture into your project, you must first decide the 'Mode', 'Start channel', and 'Number of fixtures' from the options on the right side of the screen. By default, the 'Start channel' will be set to the next available address (MyDMX Go will not allow you to patch a fixture to an address that is already assigned to another fixture). It is important that whatever options you set are matched by the fixtures that you are trying to control. For example, patching a fixture into Mode 1 (10 channels) but having the physical fixture set to Mode 2 (15 channels) will cause issues as the channels will be misaligned. It is also essential to have the same start channel set both within MyDMX Go and on your physical fixtures for the exact same reason.

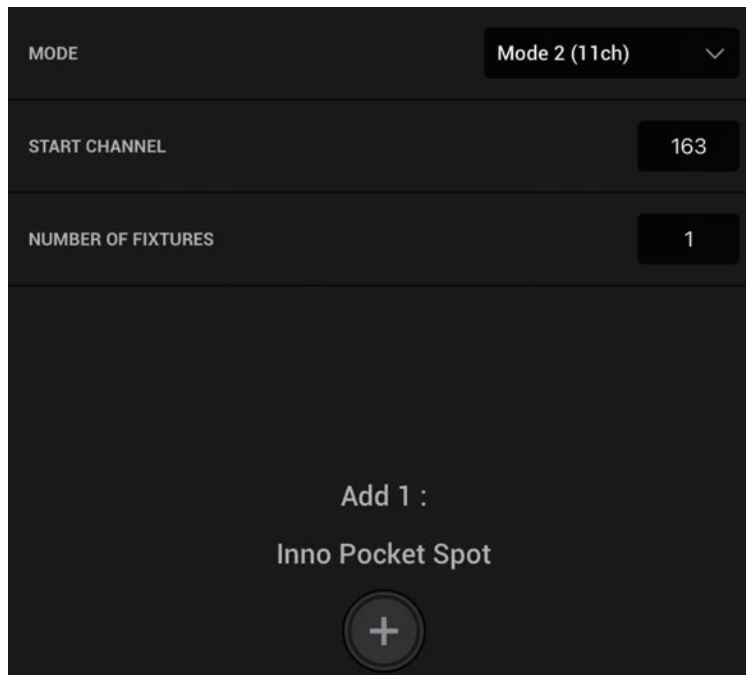

Once you have the settings all decided correctly- you can press the 'Add fixtures' button again to return to the Fixtures screen. You will now see the fixture(s) you have patched in the list on the left, as well as the Universe/Start channel on the right of the fixture name (i.e. Universe 1, Start channel 28 will appear as '28'. Universe 2, Start channel 43 will appear as 2: 43).


You can delete fixture(s) by selecting the desired fixture(s), then swiping the fixture left. This will then prompt an 'Are you sure?' message, pressing 'Yes' will delete the selected fixtures. It is also possible to select all fixtures of the same kind by enabling the 'Group select' button above the patch list, which can be used to quickly select multiple fixtures.

17 RGB	G1 139
18 RGB	G1 142
19 MOVING HEAD	G1 73
AD	G1 91
Delete Selected Fixtures	

PROJECT SETUP

Addressing Your Fixtures

Each DMX fixture is assigned a unique number so that MyDMX Go knows which fixture to send the correct channel information to. Addressing a fixture can be done when patching the fixture initially, but it is also possible to rearrange the addressing by opening the 'Patch grid' window (1). Here you will see a list of all patched fixtures on a grid which demonstrates their Start and End addresses (2). You can now select all the fixtures that you want to re-address, then drag and drop them to the new desired address. If you want to move a fixture(s) to a different DMX universe- you can do so by dragging the fixture(s) over the desired Universe (found at the bottom of the screen (3)), then once the universe display has been updated- drop the fixture(s) at the desired address.

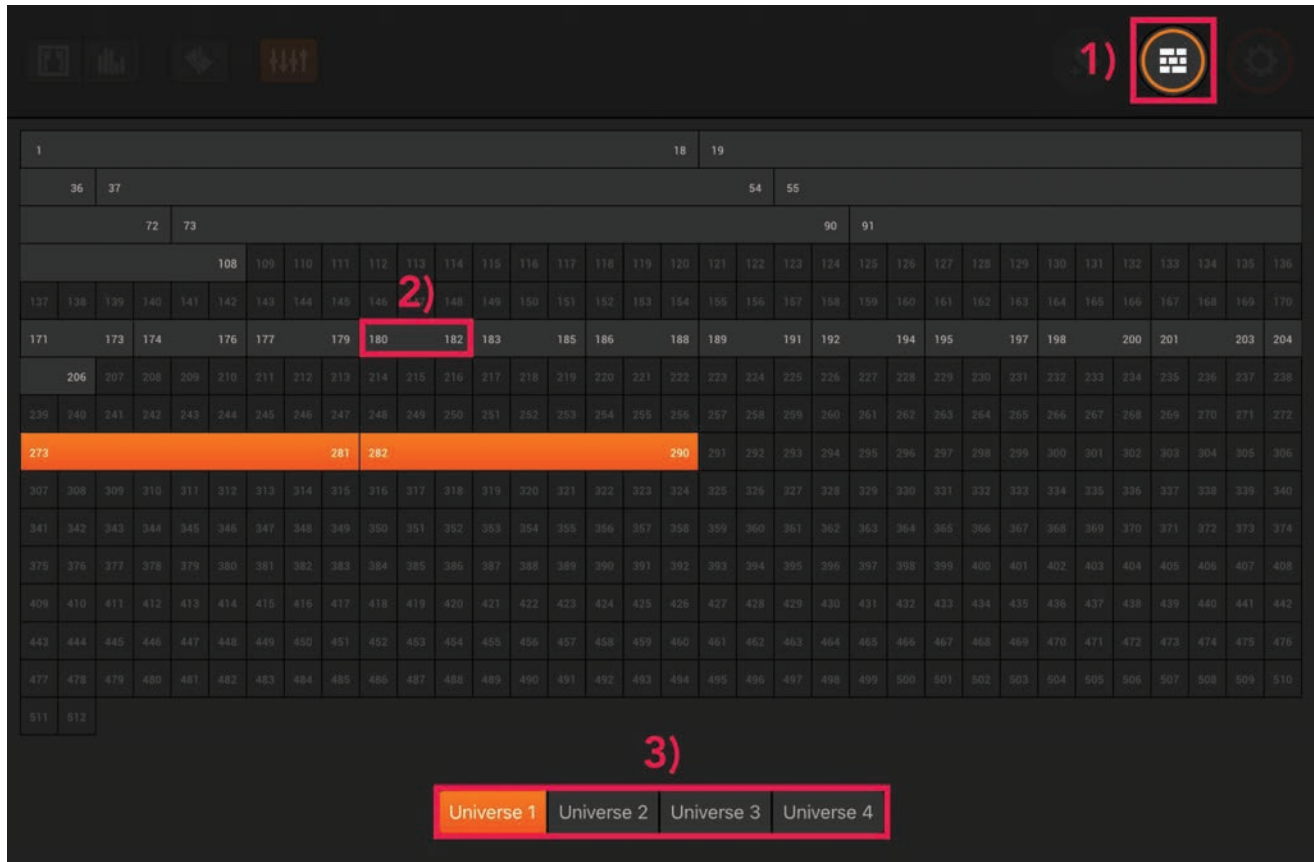


PROJECT SETUP

Fixture Index

All effects within MyDMX Go are applied in the exact order that the fixtures appear in the list, this is referred to as an 'index' or 'order'. For example if you have a color effect chasing between fixtures, the effect will start at fixture 1 and end at the last fixture in the list. To change the order of a fixture, first you must select the fixture, then press and hold and drag it to a different position in the list. Don't worry - this will not affect the DMX address of the fixture! The index number will appear immediately right of the fixture profile name in the patch list.

Is it also possible to change the fixture index using the 2D view window, see the section 'Arranging fixtures in the 2D view' for more information on this.

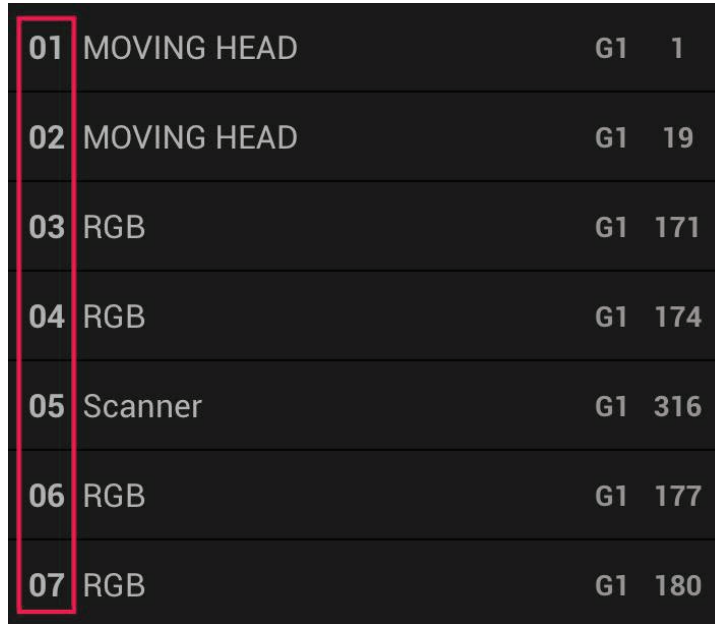A screenshot of a fixture list table with a dark background and white text. The table has four columns: index, fixture name, fixture type, and DMX address. The index column is highlighted with a red rectangular box. The rows are as follows:

01	MOVING HEAD	G1	1
02	MOVING HEAD	G1	19
03	RGB	G1	171
04	RGB	G1	174
05	Scanner	G1	316
06	RGB	G1	177
07	RGB	G1	180

PROJECT SETUP

Arranging Fixtures in the 2D View


The 2D view window to the left of the fixture patch list can be used to arrange your fixtures in a 2D space, as a reference tool for your own light show. You can zoom in and out of the window by pinching or spreading two fingers on the window. You can also move the view point by dragging the screen with two fingers. Alternately, you can press the “Auto Zoom” button (1) in the top left corner to automatically fit all fixtures into the view and center them accordingly.

To arrange a fixture’s 2D position, you must first select it. This can be done one by one, selecting each point in the 2D window (or from the patch list on the left) or you can select multiple fixtures by pressing and dragging an empty section of the grid to use the multi-selection tool (2).

It is also possible to set all selected fixtures into a vertical or horizontal line using the “2D View Settings” tool. You can also distribute the selected fixtures vertically or horizontally using the relevant options. Any multi-beam fixture (i.e. an LED bar or matrix) can be rotated in 45- or 90-degree increments using the relevant “rotate” options. (3)

If you want to light up a specific fixture from the 2D view window, you can do this by selecting the fixture(s), then pressing the “Beam On” button (4) from the bottom left corner of the window. This can be very helpful for quickly identifying particular fixtures if there is a problem to solve with your setup.

To lock the 2D view, simply press the “Lock” (5) button in the bottom right corner of the window. The lock button will appear orange whenever the 2D view is locked. To unlock the 2D view, simply press the button again.

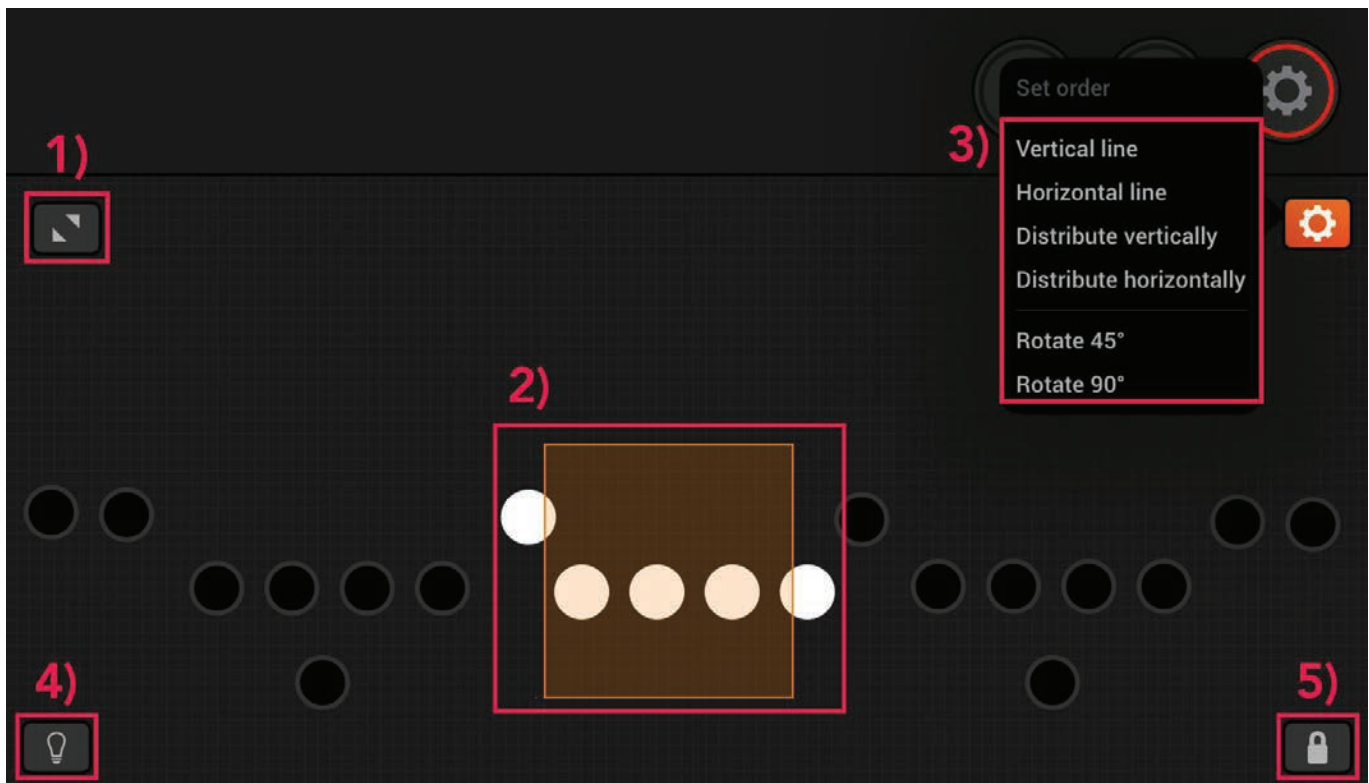


PROJECT SETUP

Controlling Fixtures Using Faders

MyDMX Go has been designed to control the fixture automatically, however you can manually override the value of a fixtures channel. To do this:

- Select a fixture (or group of the same fixture, using the 'Group select' button (1) by tapping it in the list.
- Enable the 'Faders' button (2) at the top of the patch list.
- Tap the fader you want to control, a slider control will now appear (3).
- Drag the fader up and down to change the value.
- To reset the fader back to automatic mode, tap the reset icon at the bottom of the fader (4).

Controlling a fixture via the faders window is known as a 'Manual Override'. When a fixture has a manual override present, it will be visible by the blue fader symbol found immediately left of the fixture address.

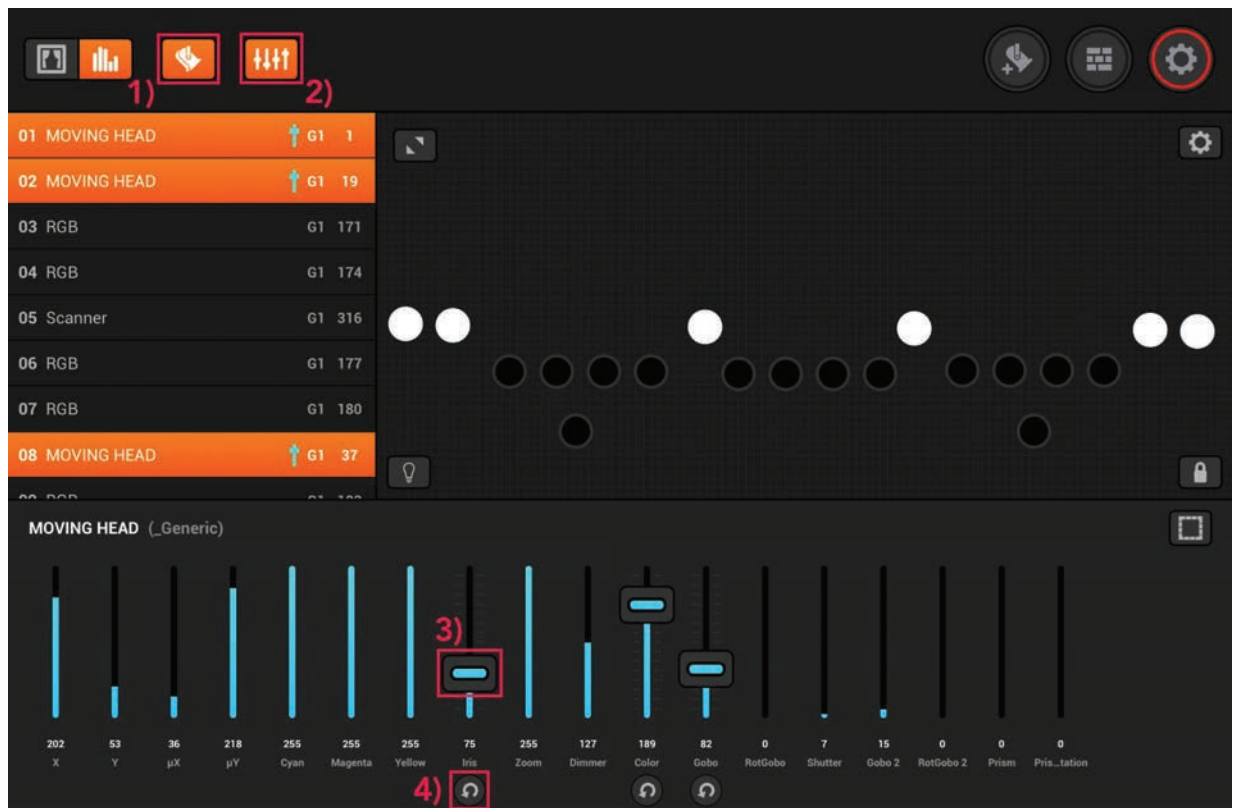

PROJECT SETUP


Setting Pan/Tilt Limitations

The limitations grid allows you to limit and invert the pan and tilt values of a fixture or group of fixtures. There are several reasons why this is important:

- Moving Head lights can typically pan 360-600 degrees. For MyDMX Go's effects to look good, it's best that they only pan no more than 180 degrees
- Depending on how a light is rigged, the center point is not always in the center of the stage/dancefloor
- The pan or tilt is sometimes inverted, meaning that the beam won't move in the correct direction compared with the other lights in the project

Setting the limitations for your fixtures only takes a minute and can transform your light show from an uncoordinated collection of random beam movements to something which looks sleek and professional. To set up the limitations:

1. Select a fixture (or group of the same fixture, using the 'Group select' button) by tapping it in the list.
2. Tap the limitations button (1).
3. Tap the left square and drag to limit the pan minimum value (2).
4. Tap the right square and drag to limit the pan maximum value (3).
5. Tap the bottom square and drag to limit the tilt minimum value (4).
6. Tap the top square and drag to limit the tilt maximum value (5).
7. Tap anywhere within the limitation square and drag to reposition the center point.
8. (optional) Tap the Invert Pan or Invert Tilt buttons (6) to invert the Min/Max values. The squares will appear orange when inverted.
9. For a Moving Head, the limitations square normally looks like in the image below. For Scanners, limitations are not normally required due to the physical limitations of the mirror.
10. Repeat the above steps for each of your light groups, then repeat with single fixture selections if some fixtures are off-center.

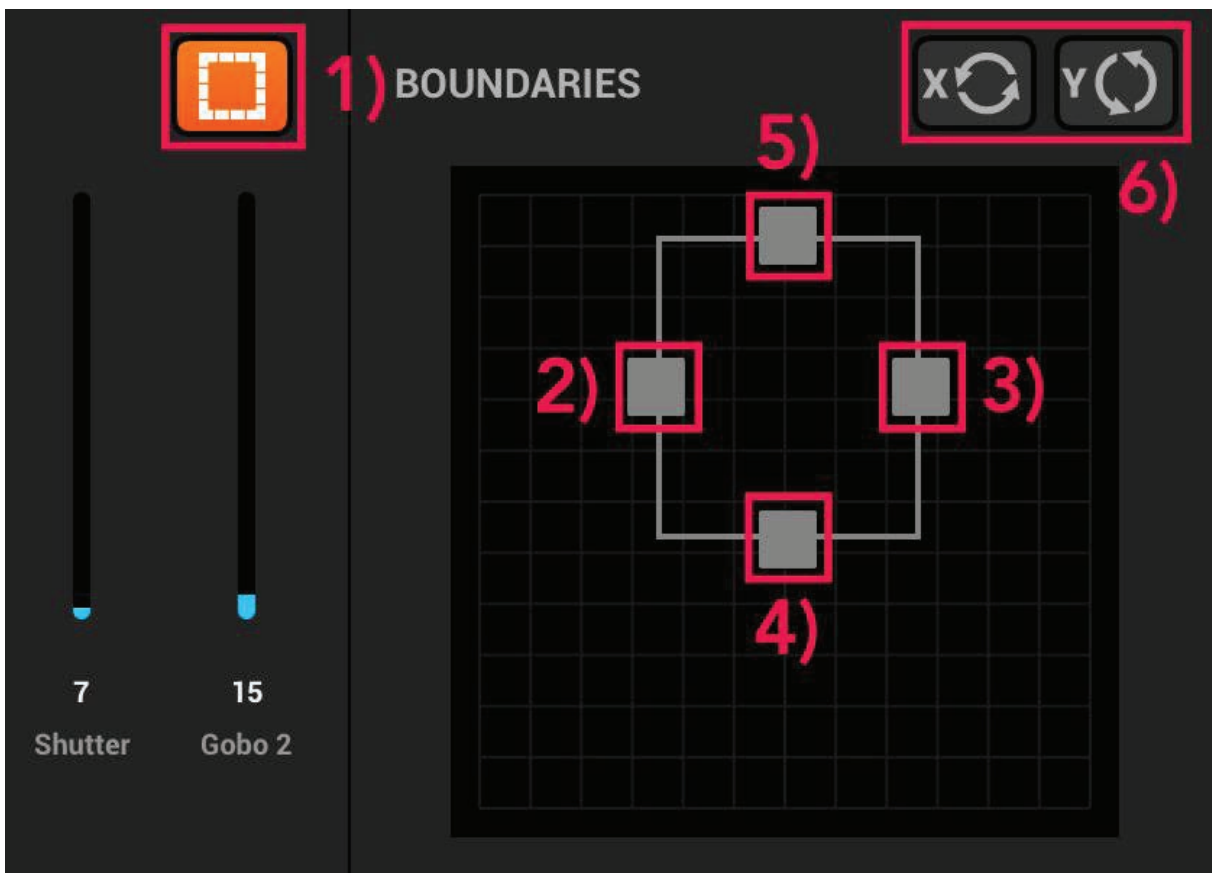

LIVE CONTROL

COLORS

The color effects are situated on the right side of the console. 8 effects are available and will be applied to all RGB, Amber, White, UV, and CMY color mixing lights. Lights with fixed color wheels may also be used with the color effects, but they will not mix in the same way as color mixing fixtures. More information on this can be found in the section 'Selecting your colors'.

Choosing an Effect


To choose between the 8 possible effects, simply tap on the desired effect and it will run immediately. Be sure that the fixtures are in the correct order/index, otherwise the effect may not run in the correct order (see the section 'Fixture index' for more information). Once you have selected an effect, you can control the following settings by tapping one of the 4 buttons in the center of the effect wheel:

1. **Phase:** Adds a delay to the effect from one fixture to the next. Increasing the value increases the delay.
2. **Size:** Increases the size of the color segments. For example- at a low value a lighting effect will only illuminate a small amount of beams together in the chaser, but with a high value more beams will illuminate together in the chaser.
3. **Fade:** Sets the amount of fade between color changes.
4. **Speed:** Sets the speed of the effect.



LIVE CONTROL

The available options will depend on the selected effect. Tap once on a control, then drag the blue bar to adjust the value from 0% - 100%. You can then tap anywhere other than the blue bar to close the window.

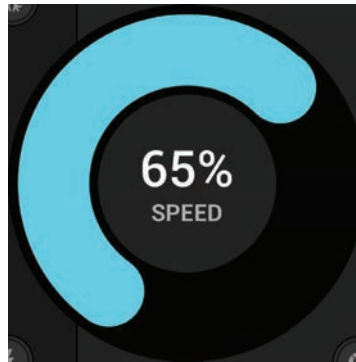


Selecting Your Colors

MyDMX Go can store up to 20 colors in the project 'palette'. This can be accessed by pressing the 'Color Selection' button in the top right of the Colors section.




By default, there will be 20 template colors for you to choose from, but each color can be manually changed by pressing and holding the desired color. This will bring up the 'Color Picker' window. Here you set the desired color by dragging the dot around the color selection tool, or you can adjust each color channel value manually with the options below. When adjusting the White, Amber or UV channels- the dot will not move around the color selection tool as it would when adjusting the Red, Green and Blue values. However, the expected color output will be visible in the top right corner of the Color Picker window for your reference.

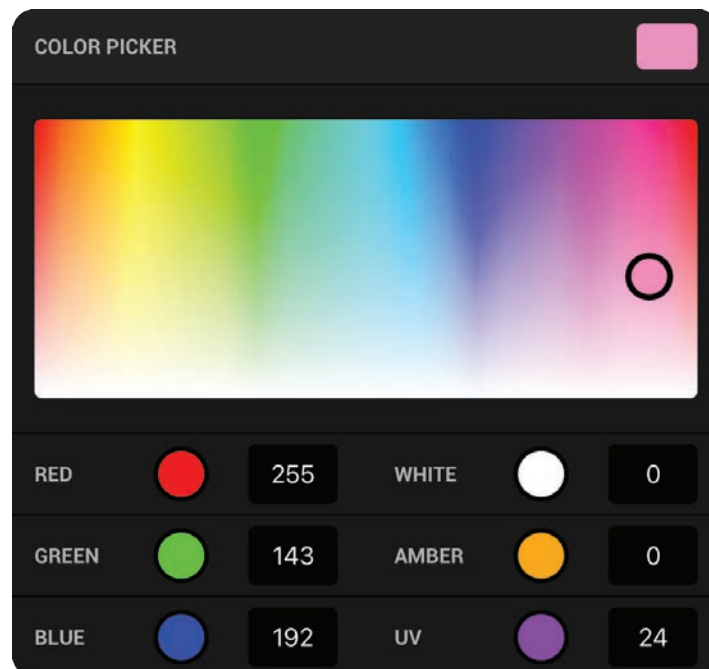


LIVE CONTROL

To save any changes made to a color, simply click anywhere outside of the Color Picker window to return back to the main screen. Please note that any changes to a color will affect all other presets using the same color. This is because MyDMX Go can store up to 20 colors per project. To select the colors you want to use in your effect, you can tap each color individually from the color palette. Up to 6 colors can be chosen for an effect. To deselect a color, simply tap it once more to remove it from the effect. Please note that the order in which colors are selected will directly affect the order in which the colors play in the effect. For example: if you use an Out-to-In effect, then choose Red, then Green, then Blue, then the effect will display the Red chaser first, then the Green chaser, then the Blue chaser in that exact order. This exact order will appear at the bottom of the color selection window.

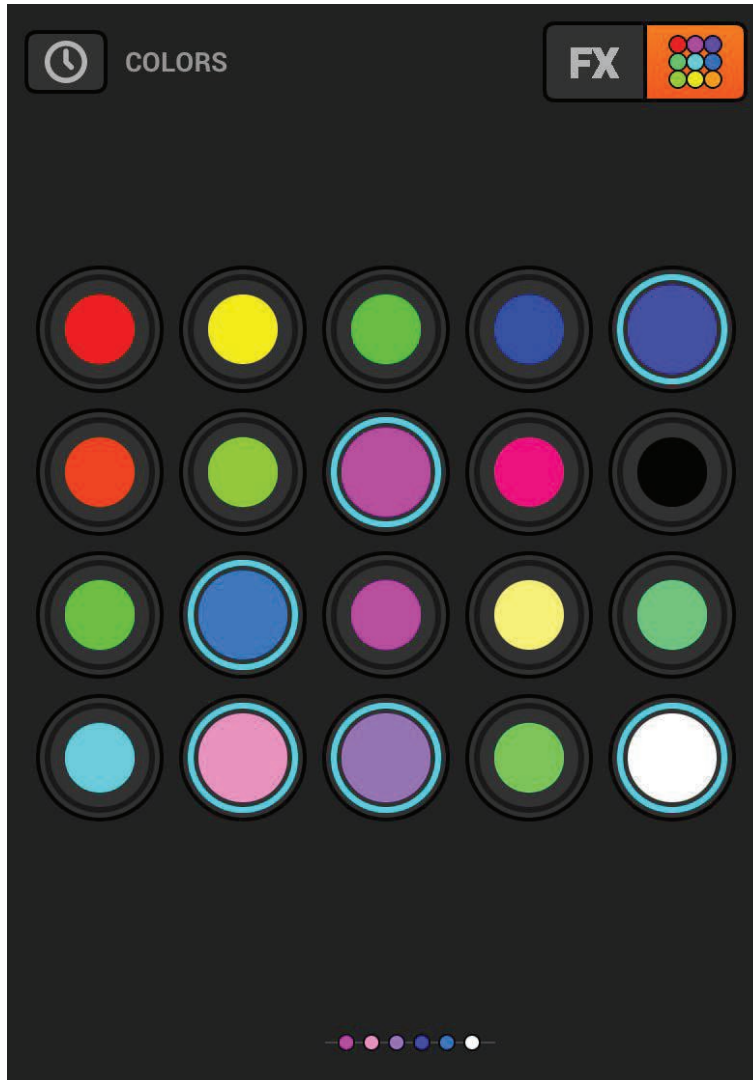

LIVE CONTROL

Fixtures that use a fixed Color Wheel channel can be controlled using the color palette, however they may not show the exact color if they do not have that color on their Color Wheel. For example- if you select orange from the color palette, but your fixture does not have orange in it's Color Wheel, it will select the closest available color (this may be red or yellow, for example). It is possible to select specific static colors for your Color Wheel fixtures, which can be done using the 'Static Colors' button (1) at the bottom right of the Colors window. Pressing this will show all Color Wheel fixtures in the project, along with all of the possible Color Wheel options available. You can select up to 6 static colors per fixture type, and you can deselect a color by tapping it a second time. Selecting multiple colors will affect each fixture of the same type in order of which colors you select, and will affect the fixtures in accordance with the fixture index. For example: If you have 4 Color Wheel fixtures and you select the white static color, then the orange static color, you will see the 1st fixture in the index show white, then the 2nd will show orange, the 3rd will show white, and the 4th will show orange.

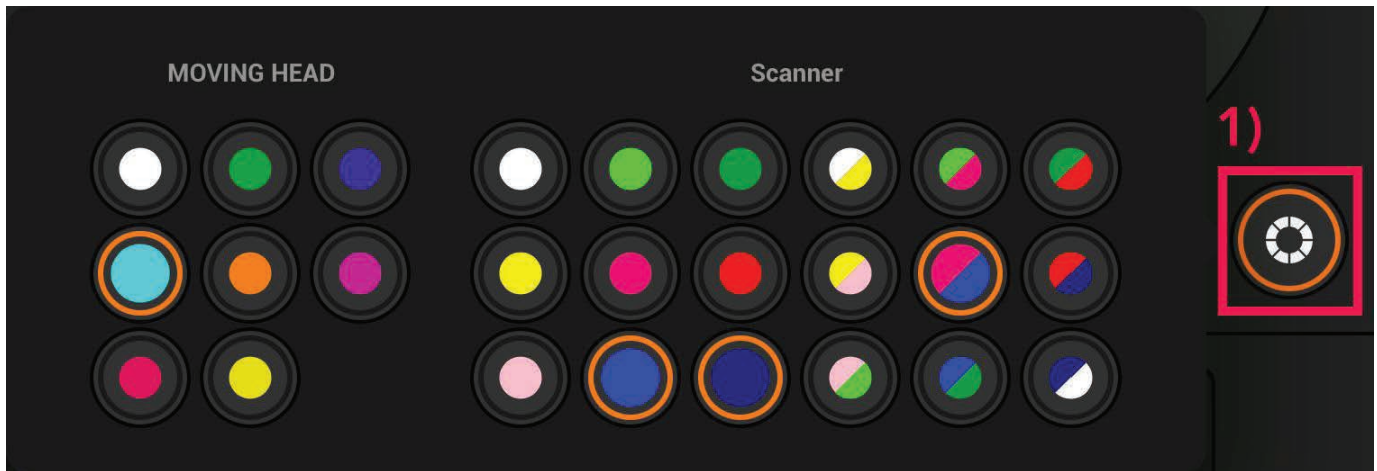

LIVE CONTROL

MOVES

Move effects are available to the left side of the console. Similar to the Color FX, there are 8 different effects to choose from and these will affect all moving fixtures that use pan and/or tilt channels. It is always best to ensure that your fixture limitations are set before working with Move FX, since this can drastically improve the outcome of your effects (see the section 'Setting pan/tilt limitations' for more information).


Choosing an Effect

As with the Color FX, you can choose between the 8 possible effects by simply tapping on the desired effect. Be sure that the fixtures are in the correct order/index, otherwise the effect may not run in the correct order (see the section 'Fixture index' for more information). Once you have selected an effect, you can control the following settings by tapping one of the 4 buttons in the center of the effect wheel:

- **Phase:** Adds a delay to the effect from one fixture to the next. Increasing the value increases the delay.
- **Size:** Increases the size of the movement. For example- at a low value a Circle movement will move in a very small radius, but at a high value it will move in a much larger radius.
- **Fade:** Sets the amount of fade between position changes.
- **Speed:** Sets the speed of the effect.



The available options will depend on the selected effect. Tap once on a control, then drag the blue bar to adjust the value from 0% - 100%. You can then tap anywhere other than the blue bar to close the window.

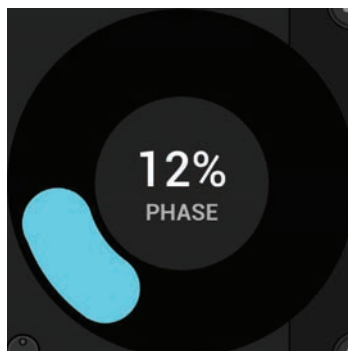


LIVE CONTROL

Center Position and Fan

The center position of your moving fixtures will of course be mostly determined by the fixture limitations, however there are instances where you may want to move an effect around the room live. To do this, you can tap the 'Center Point' button (1) in the top left of the Moves section. In this screen you can drag the dot around the XY grid to adjust the center point of your moving fixtures. To reset the center point, you can press the 'Center' button (2) found immediately below the grid.

It is also possible to adjust the fan value of your moving fixtures so that they spread their beams relative to their fixture index. You can tap the 'Fan' dial (3) to activate the dial. The dial will turn blue when active to indicate that it is on and the fan value will take effect. When the dial is pointing straight up (0%), there will be no fan effect. When the dial is all the way right (100%), there will be a maximum outward fan effect. When the dial is all the way left (-100%), there will be a maximum inward fan effect. You can tap the dial again to turn it off.

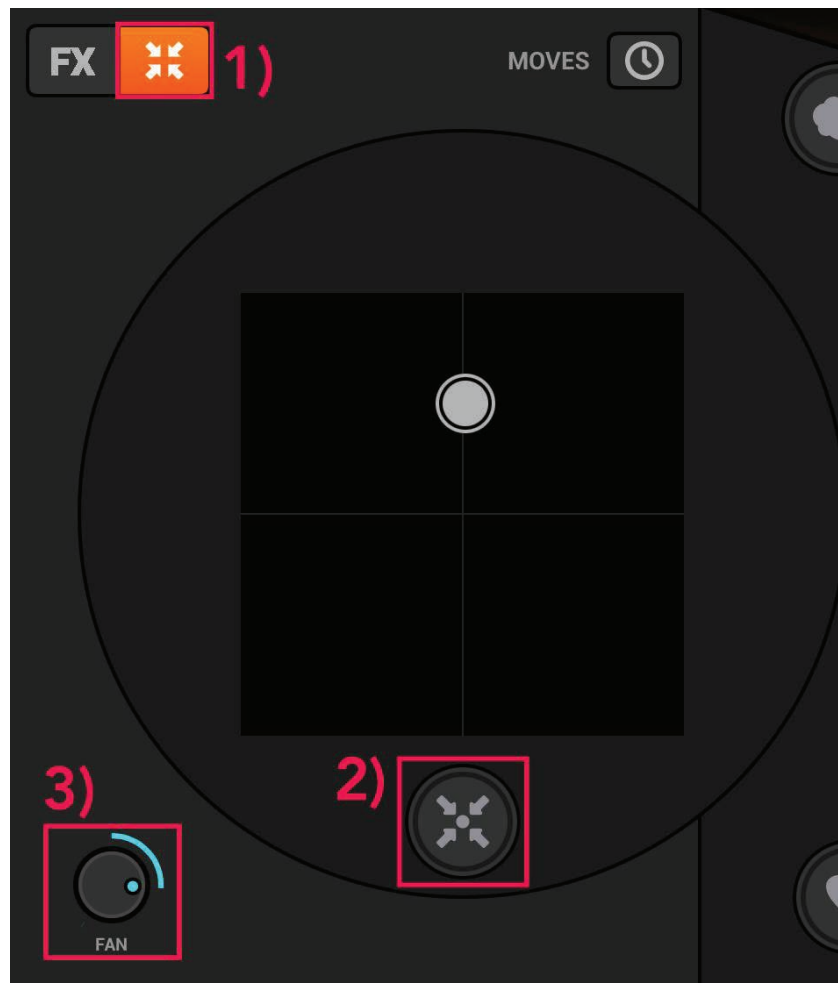


LIVE CONTROL

FLASH FX

There are 5 flash effects in the top center of the console which are activated when pressed. This allows you to create quick bursts of effects. If you want to latch the effects on, this can be done by pressing and holding a flash effect, dragging outside the button and releasing. The following effects are available:

1. **Smoke:** Activates any smoke machines you have patched in your project.
2. **Blackout:** Switches off all lights
3. **WOW!:** Creates a build-up of strobing effects that are synchronised with the BPM.
4. **Blinder:** Turns all lights to full power and white.
5. **Freeze:** Pauses the show, freezing the current levels being output.

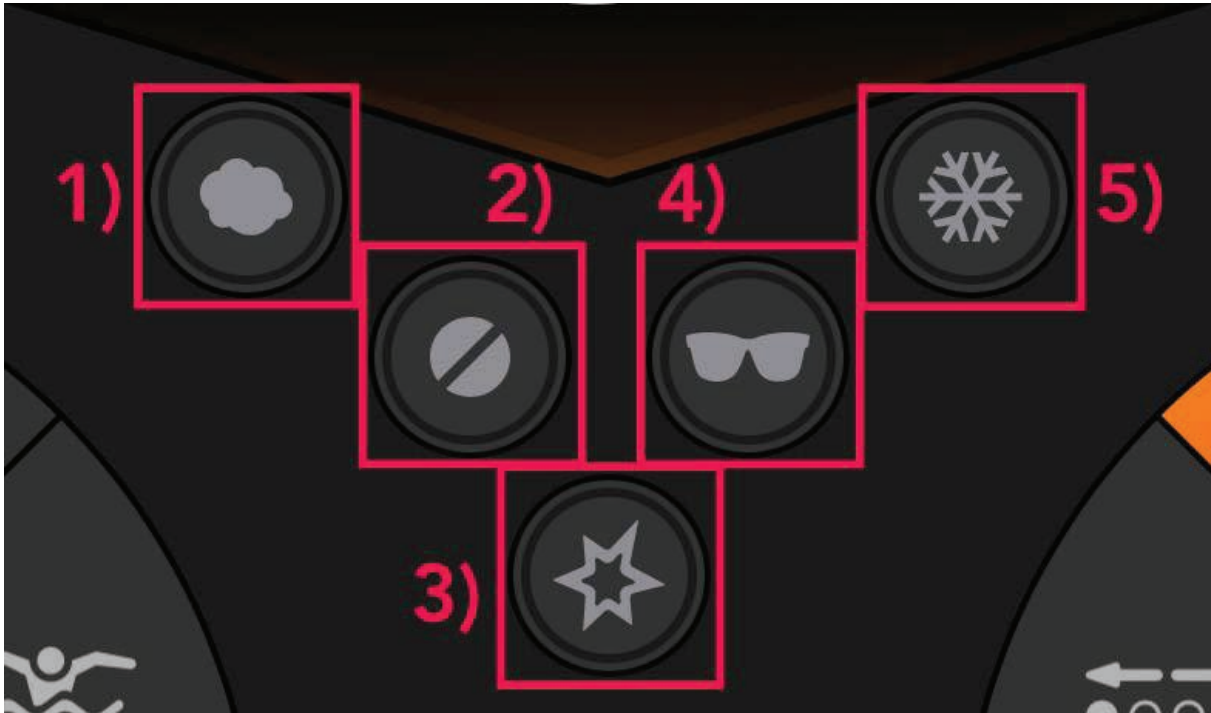

LIVE CONTROL

SPECIAL CONTROLS

Gobo Control

The 'Gobo Select' button (1) can be used to control the Gobos on your fixtures. When you press the Gobo Select button, a window will appear with all the relevant fixtures name at the top, and the selectable Gobo options for each will be displayed below. If a fixture has multiple Gobo Wheels, all possible options will appear under the same fixture name (2 & 3), but slightly spaced out into different columns for each Gobo Wheel. You can select one Gobo option per Gobo Wheel (for example, you can select a Gobo option on each Gobo Wheel if a fixture has 2 Gobo Wheels, but if a fixture only has 1 Gobo Wheel- you can only select one Gobo).



You may notice that some Gobo options have an 'R' or 'S' symbol next to them. This is referring to Gobos that can 'Rotate' and 'Shake'.




Above the Gobo Select button, there is a dial which by default is set to control the Gobo Rotation. If your fixture has a separate channel for controlling the rotation of your Gobos- this dial can be used to control the rotation speed. You can tap the dial to activate the rotation, and you can drag the dial up or down to adjust the value. If you do not see a Gobo Rotation dial above the Gobo Select button, this can be changed by pressing and holding the dial (see the section 'Other dials' for more information).



LIVE CONTROL

Strobe Control


You can activate the strobe function by pressing the 'Strobe' button (1). This function, like the Flash FX will be active when held, then deactivated when released. It can also be latched to 'on' by pressing and holding the button, dragging outside of the button's perimeter, and releasing. The strobe speed can be adjusted using the 'Strobe Speed' dial (2), which by default is located immediately above the Strobe button. You can adjust the strobe speed value by dragging the dial up or down. It is also possible to latch the Strobe to 'on' by tapping the Strobe Speed dial. If you do not see a Strobe Speed dial above the Strobe button, this can be changed by pressing and holding the dial (see the section 'Other dials' for more information).

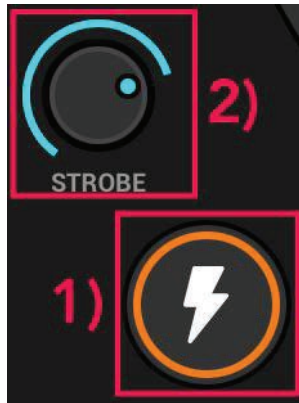

Other Dials

The two dials found at the bottom of the console on either side of the Main Dimmer, which by default control 'Gobo Rotation' and 'Strobe Speed', can be changed to control a number of other potential features. By pressing and holding one of these dials, you can choose to change the dial to one of the following features:

- Iris.
- Roll.
- Prism.
- Zoom.

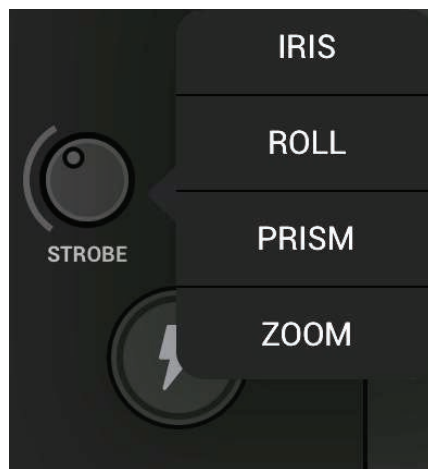



You can then control these features by pressing the dial to activate it, and dragging the dial up or down to adjust the value. If your fixture(s) do not use the specific feature you have selected (i.e. if you have no fixtures with an adjustable Iris)- this dial will take no effect. Changing from one feature to another will not reset or alter any previously adjusted dials. For example: If you have a 'Prism' set to on and at maximum rotation, then change the dial to display 'Zoom'- the Prism will continue to be on and at maximum rotation until it is manually turned off again.

LIVE CONTROL

DIMMERS

In the center of the console, you can control the 'Main Dimmer,' as shown on the left. Dragging this fader will allow you to adjust the overall intensity of all fixtures at once (providing that the fixture itself has dimming capabilities).


It is also possible to control the intensity of individual fixture groups based on the type of fixture using the Sub Dimmers, as shown on the right. You can access the 'Sub Dimmers' view by pressing the button directly below the Main Dimmer (1). Here, all fixtures of the same type will appear left to right along with their own Sub Dimmer (2), 'Flash' (3), and 'Solo' (4) buttons. You can set the respective dimmer values of each fixture group by dragging the dimmers, or you can flash a group(s) to a white light using the Flash button, or solo (blackout all groups except for the selected ones) a group(s) using the Solo button.

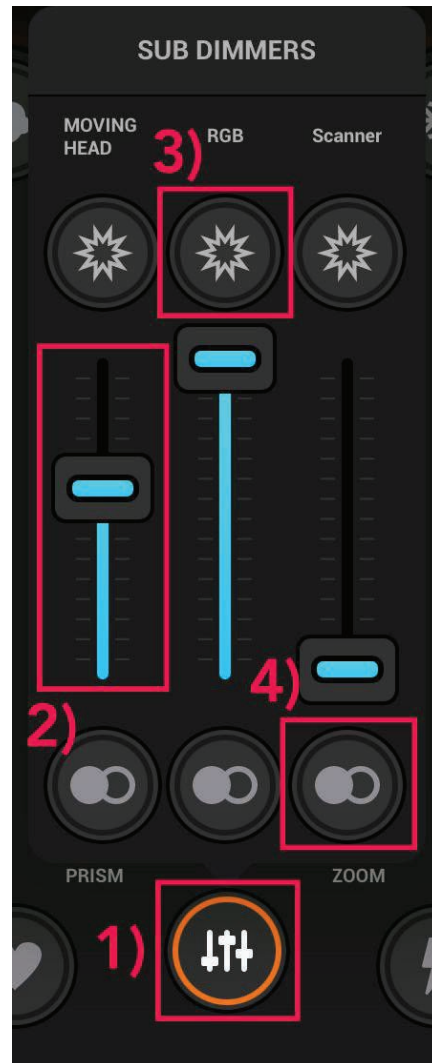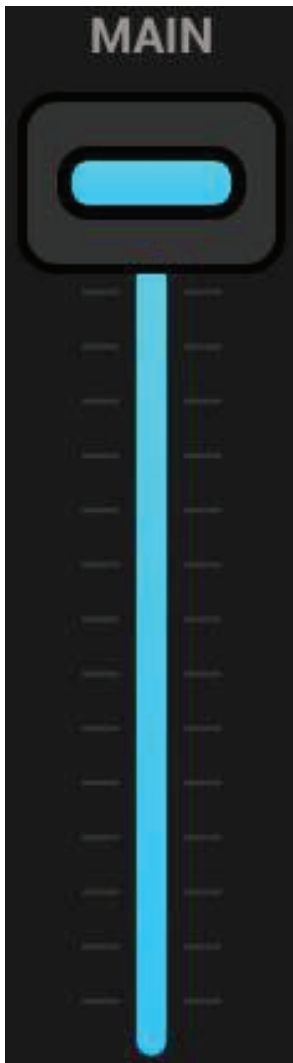


LIVE CONTROL

PRESETS

Once you have a sequence that you want to keep, you can save it to the 'Presets' bar for quick recall. There are 6 potential 'Banks' of Presets (a - f) and each Bank (1) holds 10 Preset slots (2). Along the bottom bar of the console, you will see the displayed Bank (left) followed by the 10 Preset slots in the Bank. To view the next/previous Bank, you can swipe left or right anywhere on the bottom section of the console. It is also possible to set a custom name for your Bank by pressing and holding the current Bank name (1).

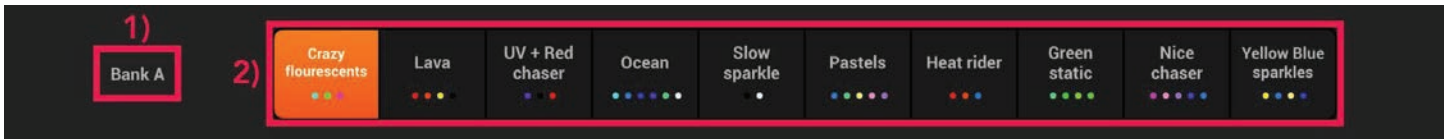

To save a Preset- you can simply press and hold the desired slot you want to save the Preset to. This will then allow you to set a custom name for the preset (1), and whether you want to include the Main Dimmer (2) or Sub Dimmer (3) values within the Preset. If you enable the Main and Sub Dimmers options when saving the Preset- this means that the current value set on the dimmers will be saved into the Preset, and will be recalled whenever the Preset is triggered. Disabling the Main and Sub Dimmers options when saving the Preset will mean that the value set on the dimmers will not be saved into the Preset, and the value will not be recalled. To confirm the save, press the green check mark. To cancel, press the red cross.

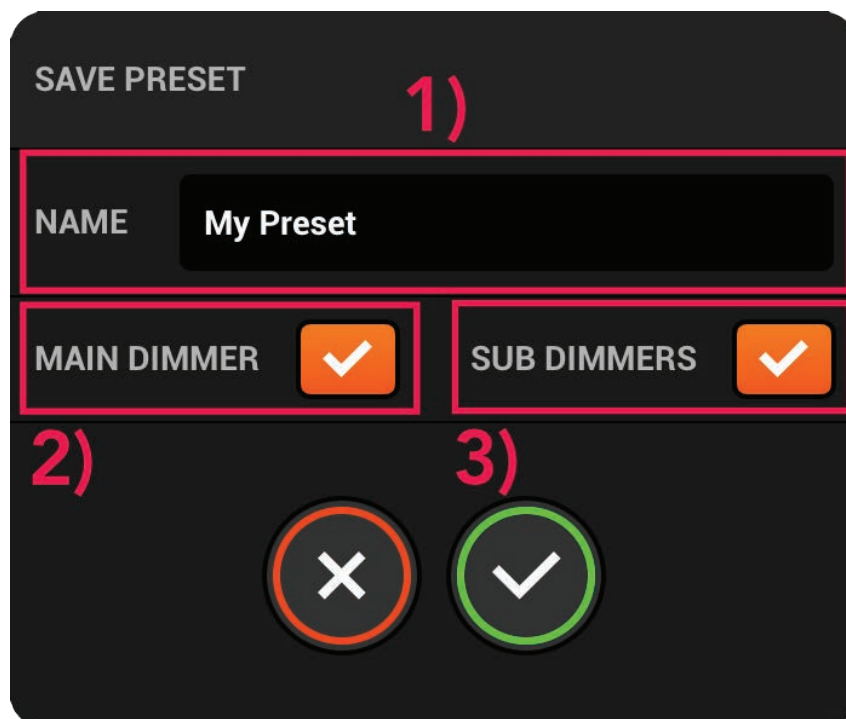


LIVE CONTROL

Saving a Preset will store all of the following settings, which will later be recalled when triggering the Preset:

- Manual overrides.
- Move effect.
- Center point.
- Fan value.
- Color effect.
- Color(s) selected, including Static Colors.
- Phase, Size, Fade and Speed values.
- Sync settings.
- Gobo information.
- Strobe settings (including if the Strobe is latched 'on').
- Dial settings.
- Main Dimmer value (optional).
- Sub Dimmers values (optional).

When you trigger a Preset, then make changes- the Preset will appear in a slightly desaturated/darker shade of orange at the bottom of the console. This is to indicate that changes have been made, as a reminder to save any changes you want to be made permanent (currently Android only).

You can set your Presets to cycle automatically by pressing the 'Auto' button. While this is active, one Preset will jump to the next every 60 seconds. The Auto mode will only cycle Presets within the current bank (for example: when you get to Preset 10 in a Bank, the next Preset to play will be Preset 1 of the same Bank).

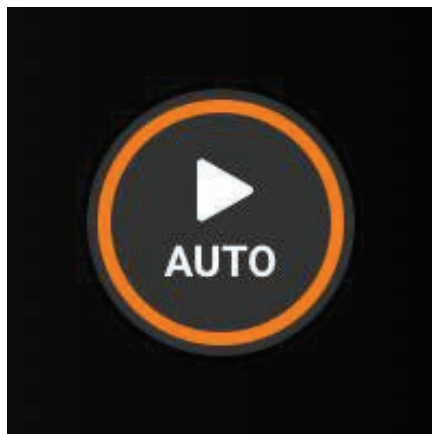

LIVE CONTROL

SYNCHRONIZING EFFECTS

By default, the Move and Color effects will be set to 'Time' mode. This means that the effect will run without any particular synchronization to audio, or BPM. Setting the speed can be controlled by the Speed parameter in the center of both effect wheels from 0% - 100%. It is also possible to have your effects run using synchronization options to create a more unified light and sound show.



BPM


By selecting the 'Sync Option' button (1) once, you will now see a metronome symbol replace the original clock symbol. This indicates that BPM mode is now enabled and your effect will be synchronized to the BPM value (2) indicated in the top right corner of the console. The BPM can be set internally by tapping the 'Tap Tempo' button (3), or externally via Ableton Link (see the section 'Ableton Link' for more information). When your effect is in BPM mode, you will notice that the effect Speed function has changed from 0% - 100% to beat divisions instead (4). These options are directly related to the set BPM. For example: If you have a Disco color effect and select a speed of "1", the color will change 1 time each beat. If you set the speed to "4", the color will change every 4 beats. If you set a value of "1/2", the color will change every 1/2 of a beat (two color changes per beat).



LIVE CONTROL

Pulse

By tapping the Sync Option button a second time, you will now see a microphone symbol (1) replace the metronome symbol. This indicates that Pulse mode is now enabled. This option works very similar to the built in 'sound-to-light' functions found within some fixtures. In this mode, the effect will run exactly the same as the default Time mode (using the speed value set within the Speed control), but every time an audio peak is detected- the effect will jump to the next section. For example: If you have a Disco color effect set to a speed of 50%, the effect will run according to the speed set- but the lights will jump to the next color on each audio peak detected. If the effect speed is set to 0%, the effect will be nearly static until an audio peak is detected- then the color will jump to the next one. The input threshold will be calculated automatically depending on the microphone volume level, the audio input signal can be visualised in the top right corner of the console (2). The audio input source will be set to whatever the tablet's current setting is, meaning it is possible to use an audio input source other than the tablet's in-built microphone by connecting an external mic to the tablet.

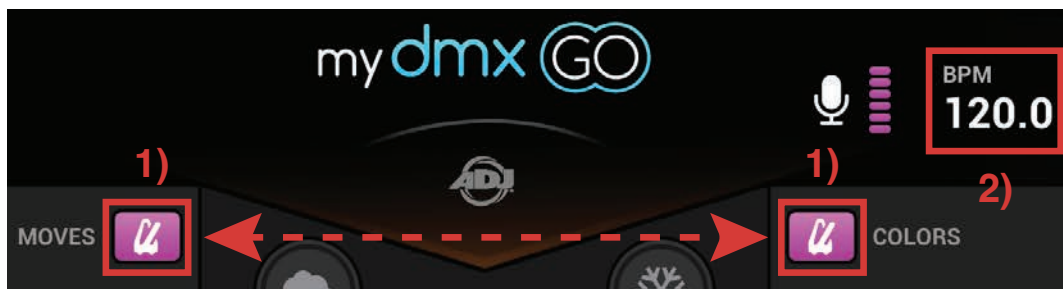


Ableton Link

The most accurate way to sync your lights with music is using Ableton Link. This feature will allow accurate synchronisation with over 100 different apps/software programs (i.e. Traktor, VirtualDJ, Rekordbox etc). To set up Ableton Link:

1. Be sure that your tablet running MyDMX Go is connected to the same network that your Ableton Link device is connected to.
2. Open the Settings tab in MyDMX Go.
3. Select the Ableton Link button (1), then enable the Ableton Link toggle (2).
4. The Ableton Link device should automatically become selected, this will be reflected by the "Connected to 1 peer" text (3).

Now, you will see the project tempo update automatically with any tempo changes made by your Ableton Link device.

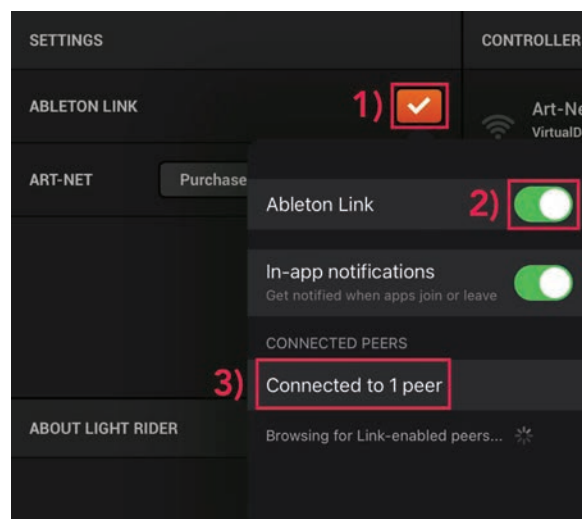

LIVE CONTROL

MIDI CONTROL


It is possible to control MyDMX Go via MIDI over USB. This is a bonus feature and so custom mappings are currently not possible. Instead, all functions come pre-mapped to match the APC Mini mk1. Some MIDI controllers will allow you to modify the commands that it sends, so it is worth consulting the user manual of your MIDI controller if you want to optimise your MIDI control of MyDMX Go.

To control MyDMX Go using MIDI on an iOS tablet- you will need a Lightning to USB adapter, or a USB A to C adapter. To control MyDMX Go using MIDI on an Android tablet, you will need an OTG cable or USB A to C adapter. The fixed MIDI mappings for MyDMX Go are as follows:

- Color FX 1-8: Note 40-47
- Move FX 1-8: Note 48-55
- Presets 1-8: Note 39-32
- Presets 9-16: Note 31-24
- Presets 17-24: Note 23-16
- Presets 25-32: Note 15-8
- Presets 33-40: Note 7-0
- Sub dimmers 1-8: CC 48-55
- Sub flash buttons 1-8: Note 64-71
- Master dimmer: CC 56
- Strobe button: Note 56
- Flash buttons 1-5: Note 58-62
- TAP button: Note 63

iOS tablet MIDI setup:

- Flash FX & Strobe (1)
- Move FX (2)
- Color FX (3)
- Presets (4)
- Dimmers (5)

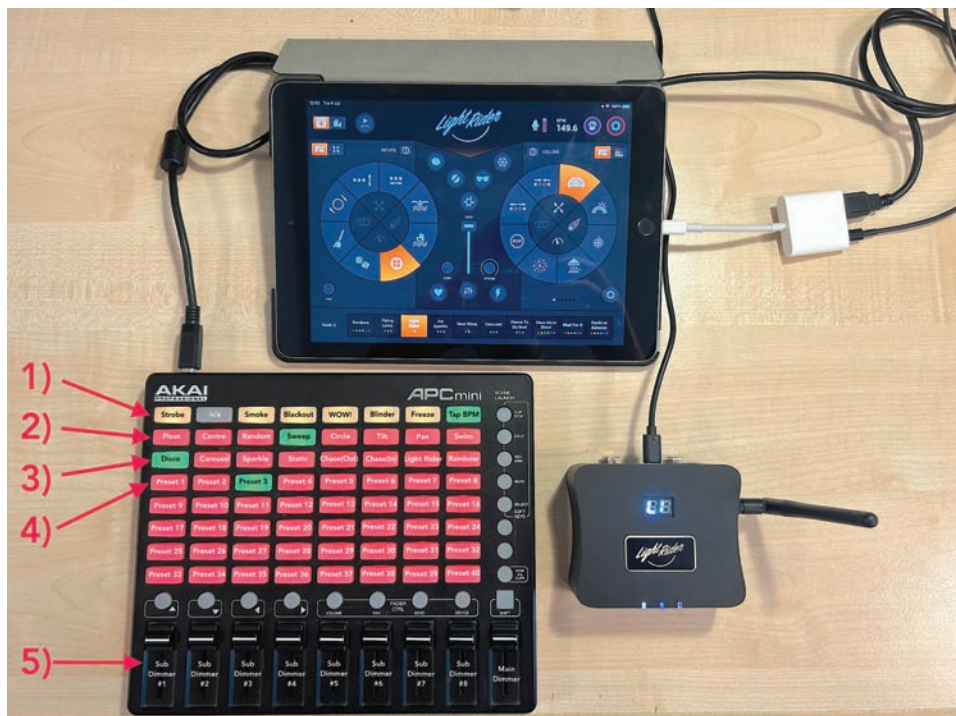

LIVE CONTROL

Android tablet MIDI setup:

- Flash FX & Strobe (1)
- Move FX (2)
- Color FX (3)
- Presets (4)
- Dimmers (5)



3D VISUALIZER

MyDMX Go is compatible with the Easy View 2 visualisation software, which will allow you to visualise your light show without needing to connect all your fixtures manually! This is a very useful reference tool for programming your light show quickly and easily.

REQUIREMENTS

Checklist

In order to set up the 3D visualiser with MyDMX Go, you will need to have the required hardwares, licences, and software. Below is a full checklist for all that you need to set this up:

- Tablet with MyDMX Go installed.
- Computer capable of running Easy View Connect (minimum operating system: MacOS 10.15 or Windows 7 64-bit)
- MyDMX Go compatible DMX interface (i.e. MyDMX Go device).
- Male to Male XLR gender changer and generic XLR cable.
- A second ADJ Group DMX USB interface.
- The following licences purchased on the second ADJ Group DMX USB interface (these can be purchased from www.adj.com. See 'Purchasing additional SUT licences' for more information on how to do this):
 - DMX Input licence (found in the Hardware section).
 - Easy View Connect licence.
- Easy View Connect software (download links below):
 - [Mac Easy View Connect download link](#)
 - [Windows Easy View Connect download link](#)

SETUP

Hardware Setup

In order to connect your MyDMX Go app to Easy View Connect, you will need to complete the following steps:


1. Connect the tablet to the MyDMX Go interface via WiFi or OTG cable (Android only). Or 'other' compatible interfaces.
2. Launch the MyDMX Go app and connect to the interface from the device list.
3. Plug the XLR gender changer into the correct XLR port.
4. Connect the second SUT compatible DMX Interface to the computer via USB. (NOTE: This is NOT the interface which you will use with the MyDMX Go app. This is the interface that will connect to the 3D Visualiser tool).
5. Ensure that the relevant licences have been purchased and synchronised (see 'Purchasing additional SUT licences' and 'Synchronising SUT licences' for more information).
6. Ensure that the Hardware Manager and SUT Tool are closed.
7. Using the XLR cable and gender changer- connect the second DMX interface to the one you are connected to the MyDMX Go app with.

3D VISUALIZER


Software Setup

Once the steps have been completed from the 'Hardware setup' section- you can proceed to setup the Easy View Connect software. This can be done via the following steps:

1. Download and install the Easy View Connect software via the following links:
 - [Mac Easy View Connect download link](#)
 - [Windows Easy View Connect download link](#)

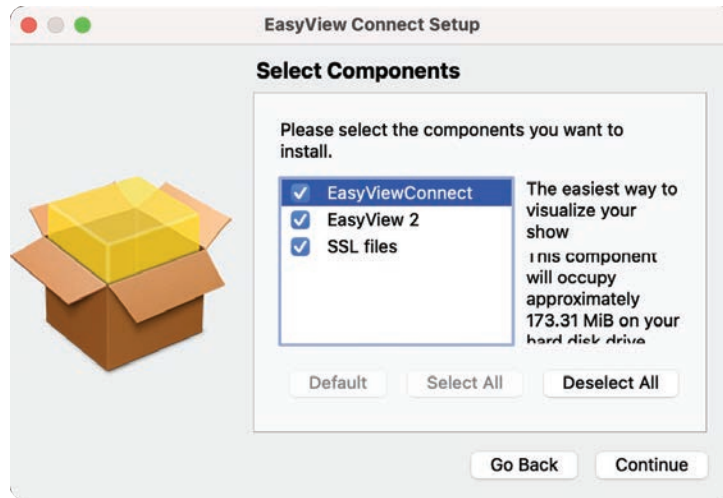

2. Run the 'Easy View Connect' program.
3. You should see your SUT device connected via USB appear in the 'Hardware(s) available' list- if so, select it.
4. Set the desired Hardware and Software universe settings. Usually this is simply 'Universe 1' for both options.
5. Select 'Open the visualiser' to launch the visualiser.

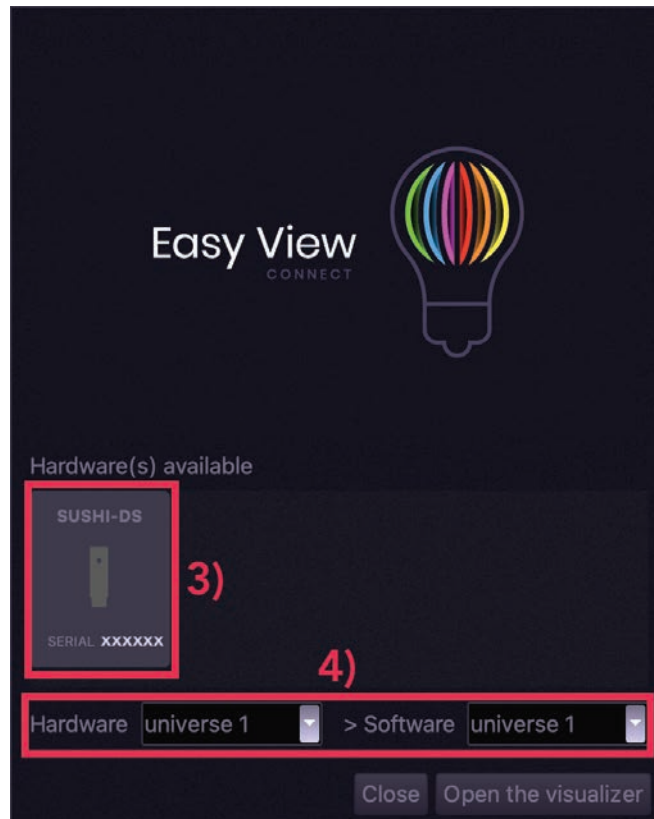

3D VISUALIZER

NAVIGATING THE 3D VISUALIZER

The full user manual for Easy View 2 can be accessed at the ADJ website: www.adj.com. The full user manual will go into much more detail about all of the functions possible within Easy View, however the following information will give you the basic information you need to start setting up your light show!

 


3D VISUALIZER

3D Visualizer Configuration

You will need to manually patch in the fixtures to Easy View so that they match your MyDMX Go project. This can be done via the following steps:

1. Select the 'Build view' button from the toolbar.




2. Select the 'Add fixtures' button from the Objects tab.




3. Locate the desired fixture, then select it.

4. Select the relevant Mode (as set within the MyDMX Go app)

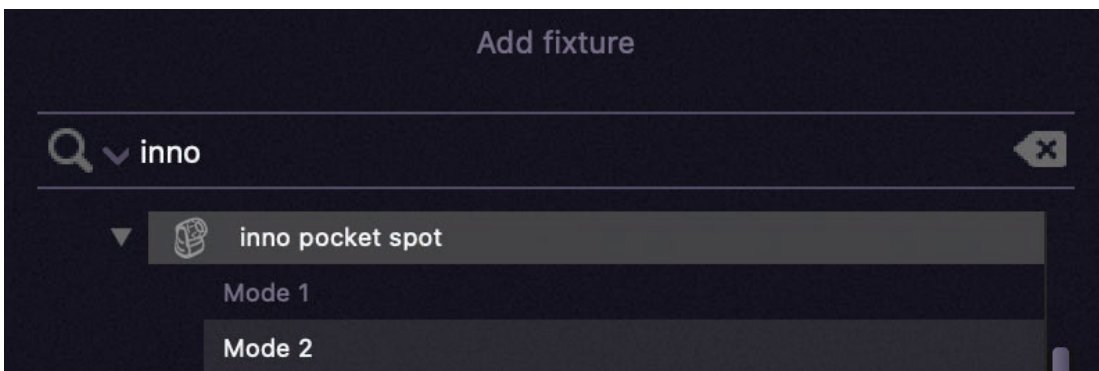

5. Select the first DMX channel, the number of fixtures you want to add, then press the 'Patch' button to add them to the project.


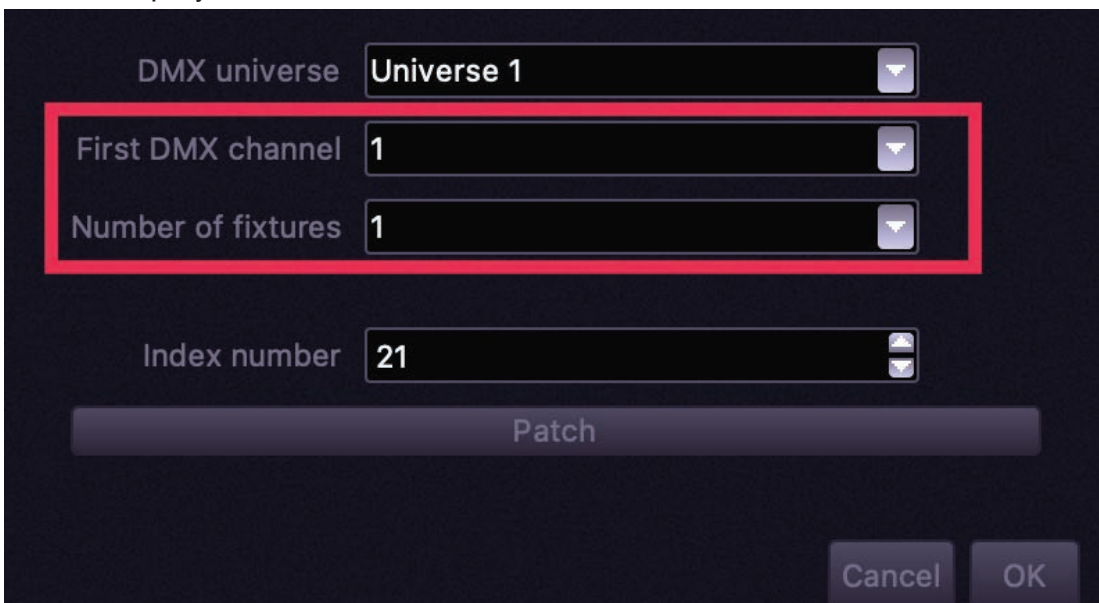


3D VISUALIZER

6. Repeat this process until you have the full list of fixtures within your Easy View project as you have in your MyDMX Go project.

Once you have some fixtures patched into your Easy View project- you can manually adjust their position, size and rotation. This can be done via any of the following methods:

- Manually dragging the Red/Blue/Green options. This will allow you to move, rotate or scale the fixtures on the relevant axis.
- Type in the desired values within the 'Properties' section of Build view.
- Use the Positions Wizard to align/reposition/rotate a group of fixtures into particular shapes

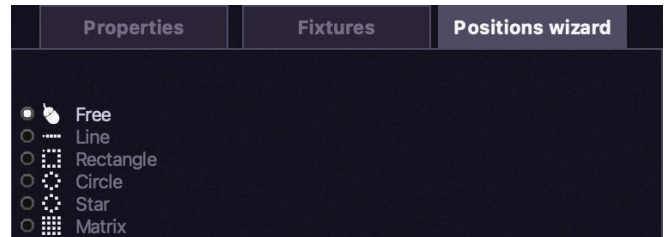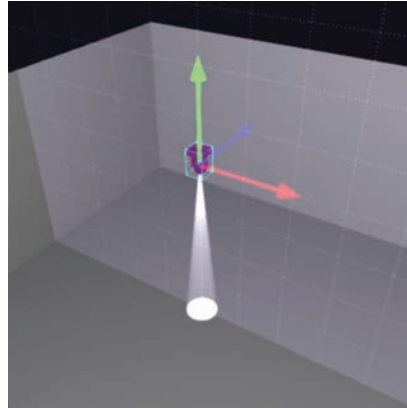

You can save/open an Easy View project within the 'File' drop down menu.

