

Roland



To obtain the PDF manual



1. Enter the following URL in your computer.

<http://www.roland.com/manuals/>



 
2. Choose "UM-ONE mk2" as the product name.



UM-ONE

USB MIDI INTERFACE


Owner's Manual

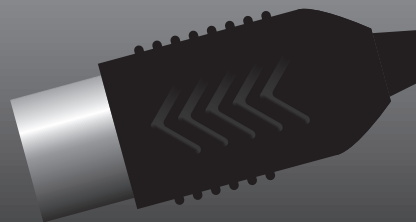

What is MIDI?

MIDI is an internationally recognized standard for exchanging performance information between electronic musical instruments and computers.

 For example, in the illustration below, a MIDI signal meaning “the ‘C’ key on the MIDI keyboard was pressed” passes through the UM-ONE and is received by the computer’s software sound module, and then the software sound module plays the note “C.”

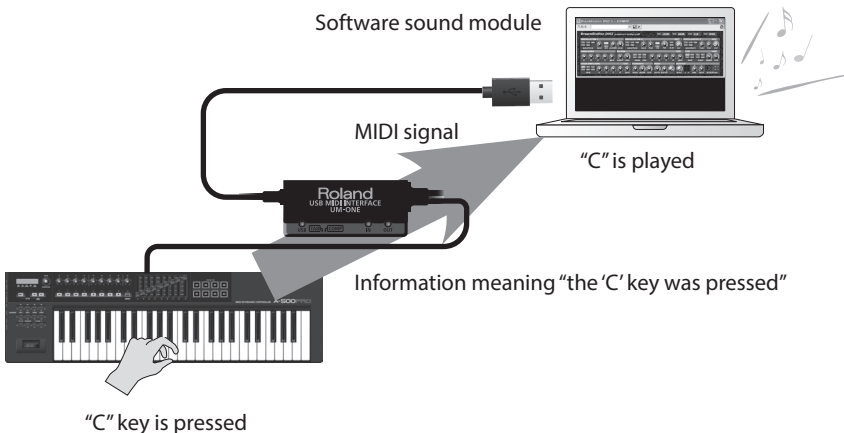

In this way, MIDI is used to send performance information to other instruments; for example “the ‘C’ key was pressed with a certain amount of force,” “the instrument was changed to a violin sound,” “the volume was raised/lowered,” “the pitch was raised/lowered,” etc. In other words, MIDI is the “language of musical instruments.”

MIDI signals are merely performance instructions, therefore a MIDI sound module, such as a software sound module, is required to produce sound.

All software sound modules and DAW (Digital Audio Workstation) software support MIDI.

* DAW software is a term that refers to music production software.

Before using this unit, carefully read the sections entitled: “USING THE UNIT SAFELY” and “IMPORTANT NOTES” (p. 3; p. 5). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, this Owner’s Manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Copyright © 2011 ROLAND CORPORATION



All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

Roland is a registered trademark of Roland Corporation in the United States and/or other countries.




USING THE UNIT SAFETY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols





	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The 🔞 symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

WARNING

- Do not open or perform any internal modifications on the unit. 
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 
- Never install the unit in any of the following locations.
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
 - Damp (e.g., baths, washrooms, on wet floors); or are 
 - Exposed to steam or smoke; or are
 - Subject to salt exposure; or are
 - Humid; or are
 - Exposed to rain; or are
 - Dusty or sandy; or are
 - Subject to high levels of vibration and shakiness.

WARNING

- Do not place containers containing liquid on this product. Never allow foreign objects (e.g., flammable objects, coins, wires) or liquids (e.g., water or juice) to enter this product. Doing so may cause short circuits, faulty operation, or other malfunctions. 

- Immediately disconnect the USB cable, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page when: 
 - Objects have fallen into, or liquid has been spilled onto the unit; or
 - If smoke or unusual odor occurs
 - The unit has been exposed to rain (or otherwise has become wet); or
 - The unit does not appear to operate normally or exhibits a marked change in performance.
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 

USING THE UNIT SAFETY

WARNING

- Protect the unit from strong impact.
(Do not drop it!)



CAUTION

- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.



- Never climb on top of, nor place heavy objects on the unit.



- Disconnect all cords coming from external devices before moving the unit.



IMPORTANT NOTES

Placement

- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Do not put anything that contains water (e.g., flower vases) on this unit. Also, avoid the use of insecticides, perfumes, alcohol, nail polish, spray cans, etc., near the unit. Swiftly wipe away any liquid that spills on the unit using a dry, soft cloth.

- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- Use a reasonable amount of care when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.

MEMO


Contents

USING THE UNIT SAFETY	3
IMPORTANT NOTES	5
Panel Descriptions	8
Installing the Dedicated Driver	9
Basic Use	10
Recording MIDI Data, Playing a Software Sound Module	10
Playing Back MIDI Data	11
Connecting the External Equipment to UM-ONE	12
Using the UM-ONE with a Computer	12
Using the UM-ONE with an iPad	12
Troubleshooting	14
Driver Installation	14
Using the UM-ONE	14
Main Specifications	17

Panel Descriptions

Note

 Do not connect the UM-ONE to the computer until the driver has been installed (p. 9).

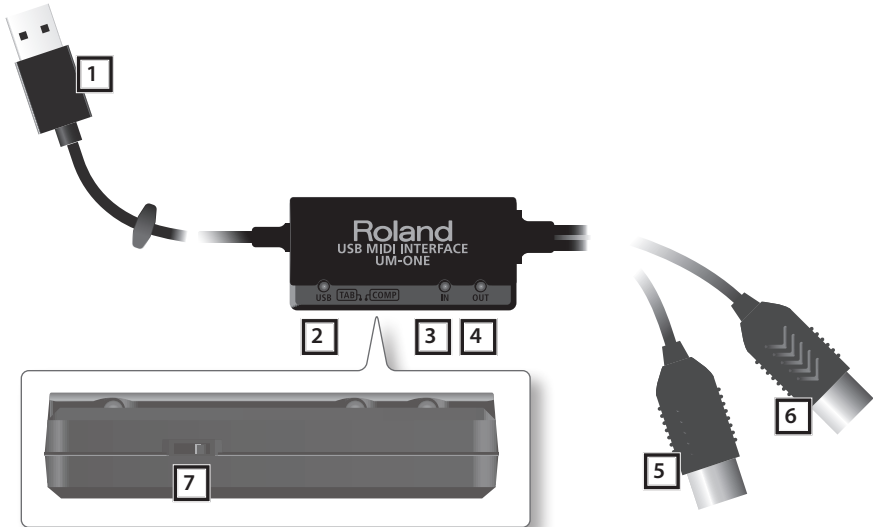

No.	Name	Description	
1	USB Cable	Connects the UM-ONE to a computer.	
2	USB Indicator	Lights when the UM-ONE is connected to a computer and the computer has detected the UM-ONE.	
3	MIDI IN Indicator	Lights when MIDI messages are received from the device connected to the MIDI IN cable.	
4	MIDI OUT Indicator	Lights when MIDI messages are sent from the computer.	
5	MIDI IN Cable (CONNECT TO MIDI OUT)	Connects to the MIDI OUT connector of the MIDI device (such as a MIDI keyboard) that will be used for MIDI recording or for playing a software sound module.	
6	MIDI OUT Cable (CONNECT TO MIDI IN)	Connects to the MIDI IN connector of a hardware sound module when DAW software is used to play the hardware sound module.	
7	[COMP/TAB] Switch	COMP	For connecting a computer. Refer to "Using the UM-ONE with a Computer" (p. 12). In order to use the COMP setting, you must install the driver in your computer.
		TAB	For connecting an iPad. Refer to "Using the UM-ONE with an iPad" (p. 12). Driver installation is not necessary.

Installing the Dedicated Driver

Note

Do not connect the UM-ONE to the computer until you are directed to do so.

Download the USB driver from the Roland website. For details, refer to Readme.htm which is included in the download.

<http://www.roland.com/support/>

Basic Use

 
Precautions Concerning the Use of Software

Before using the UM-ONE with your software, please note the following points.

- Connect the UM-ONE to the computer before starting the software.
- Do not disconnect the UM-ONE from the computer while the software is running. After exiting the software, disconnect the UM-ONE.
- Select the UM-ONE for the software's MIDI device setting.
- The UM-ONE will not operate in the Mac OS X Classic environment. Use the UM-ONE when the Classic environment is not running.

Recording MIDI Data, Playing a Software Sound Module


To transmit MIDI messages from a MIDI keyboard or digital piano in order to record MIDI data using DAW software or play a software sound module, make the following connections and settings.

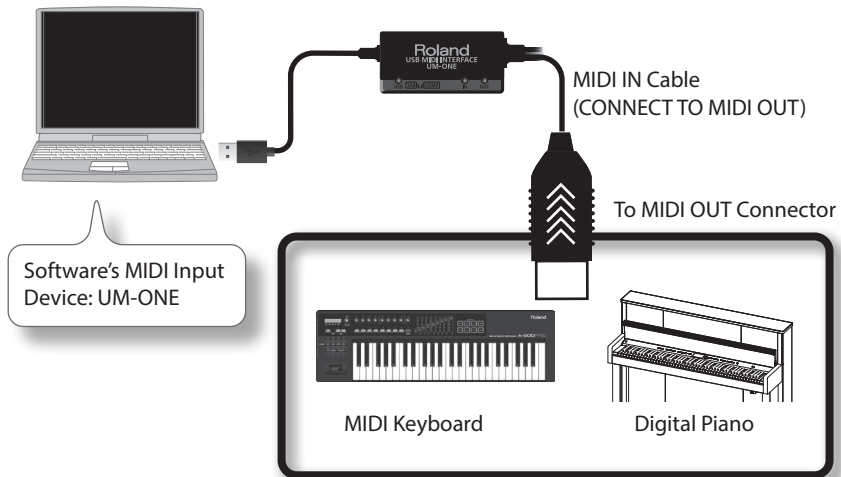

* When connecting other devices, always be sure to turn the volume down before connecting or disconnecting cables to prevent damage to speakers.


Playing Back MIDI Data

 To send MIDI messages that were recorded using DAW software to a MIDI sound module or software sound module, make the following connections and settings.

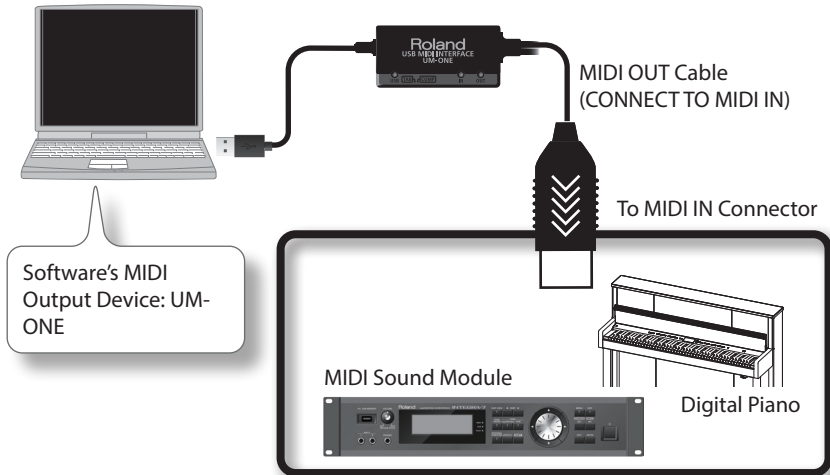

* When connecting other devices, always be sure to turn the volume down before connecting or disconnecting cables to prevent damage to speakers.

 To play a MIDI keyboard and use a MIDI sound module as the instrument, turn on the software's MIDI THRU feature.

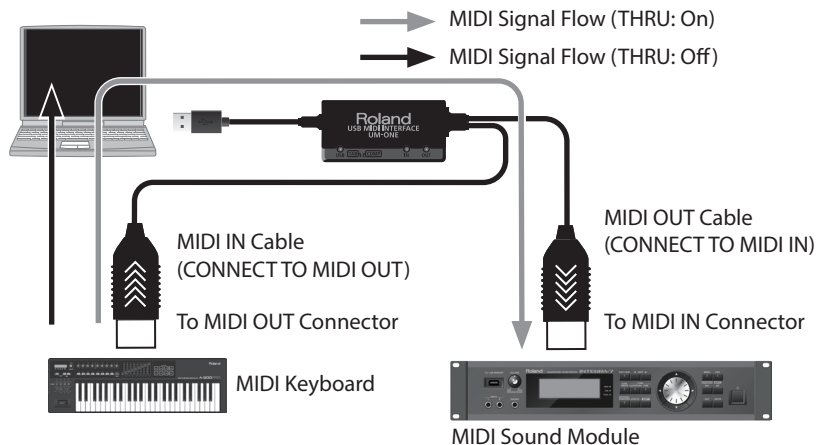


Connecting the External Equipment to UM-ONE

The [COMP/TAB] switch needs to be placed at the setting that's appropriate for the device to which you're connecting the UM-ONE.

Switch position	Connected device
COMP	For connecting a computer. Refer to "Using the UM-ONE with a Computer" (p. 12). In order to use the COMP setting, you must install the driver in your computer.
TAB	For connecting an iPad. Refer to "Using the UM-ONE with an iPad" (p. 12). Driver installation is not necessary.

Using the UM-ONE with a Computer

 If using the UM-ONE while connected to a computer, set the UM-ONE's [COMP/TAB] switch to the "COMP" position.

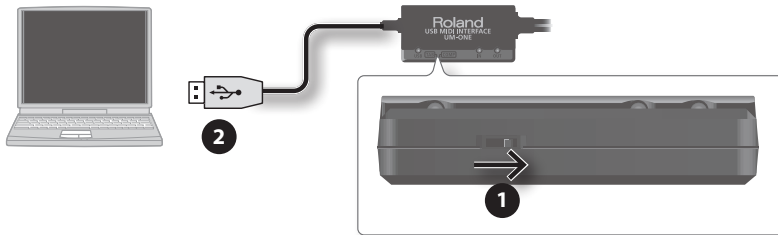

1. Set the UM-ONE's [COMP/TAB] switch to the "COMP" position.
2. Connect the UM-ONE to the computer.

MEMO

If you want to connect the UM-ONE to a computer in which the USB driver has not been installed, disconnect the UM-ONE's USB cable from the computer, and install the USB driver in the computer as described in the section "Driver Installation" in the UM-ONE owner's manual.

Using the UM-ONE with an iPad

If using the UM-ONE with an iPad, set the UM-ONE's [COMP/TAB] switch to the "TAB" position.

Before you continue, please make sure to access the following URL and check the operating requirements and other relevant information.

https://roland.cm/ios_info

 


NOTE

- The first-generation iPad cannot be used.
- The iPad app you're using must support CoreMIDI.

You'll need to provide the following items

- iPad (made by the Apple Inc.)
- Apple iPad Camera Connection Kit (Camera Connector; made by the Apple Inc.)
- USB hub (commercially available; a type to which an AC adaptor or other power supply is connected)
- USB cable (commercially available)

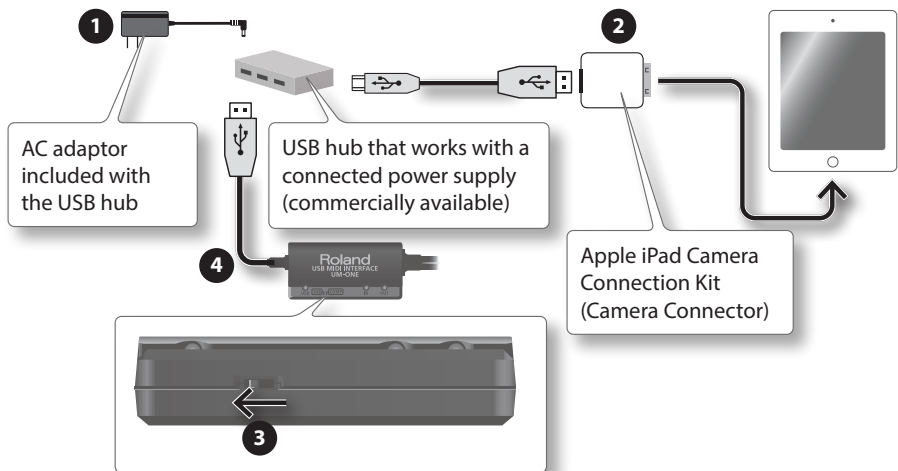

1. Power up your USB hub (connect the AC adaptor to the USB hub).
2. Connect the USB hub to the iPad using the Camera Connector of the Apple iPad Camera Connection Kit.
3. Set the UM-ONE's [COMP/TAB] switch to the "TAB" position.
4. Connect the UM-ONE to the USB hub.

MEMO

Operation may be unstable if you use a USB hub of a type that does not have a connected power supply, or if you connect the UM-ONE directly to the iPad.

Troubleshooting

If you experience problems, read this chapter first. It contains tips for solving most problems. If this chapter cannot help you solve a problem, please refer to the support section of our website. If the problem is not resolved, refer to the contact information listed at the end of this document.

Roland support website: <http://www.roland.com/support/>



Driver Installation

Problem	Confirmation	Resolution
Cannot install	Are you logged on with a user account that does not have administrator privileges?	Log on to the computer with a user account that has administrator privileges. For details, consult the administrator for your computer system.
Installer does not exit	Is your computer running on battery power?	Connect the power cord to the computer.
	Other than a mouse and keyboard, are any USB devices connected?	Make sure that there are no USB devices connected to the computer (other than a mouse and keyboard) during installation.
	Is the UM-ONE connected to a USB hub that is connected to a power supply?	Use a USB hub that connects to a power supply.

Using the UM-ONE

Problem	Confirmation	Resolution
Cannot select or use UM-ONE device	Is the driver installed?	Install the driver (p. 9).
	Is the UM-ONE's USB indicator off?	Make sure that the UM-ONE is connected to the computer correctly. If the problem is not resolved, reinstall the driver.
	Is the UM-ONE's device name displayed?	Exit all programs that are using the UM-ONE, disconnect the UM-ONE's USB cable, and then reconnect it. If the problem is not resolved, reinstall the driver.

Problem	Confirmation	Resolution
Cannot select or use UM-ONE device	Did the computer enter standby (suspend) mode, hibernate mode, or sleep mode while the UM-ONE was connected?	Exit all programs that are using the UM-ONE, disconnect the UM-ONE's USB cable, and then reconnect it. If the problem is not resolved, restart the computer.
	Did you disconnect and reconnect the USB cable while using the UM-ONE?	Exit all programs that are using the UM-ONE, disconnect the UM-ONE's USB cable, and then reconnect it. If the problem is not resolved, restart the computer.
	Was the UM-ONE connected to the computer while the computer was starting up?	Connect the UM-ONE after the computer has started up. (With some computers, the UM-ONE cannot be used if it is connected to the computer while the computer is starting up.)
Cannot select or use UM-ONE device	Have you configured "Audio MIDI Setup"? (Mac OS X)	Configure Audio MIDI Setup.
Cannot play back or record	Is the driver installed?	Install the driver (p. 9).
	Is the software's input device and output device configured?	Select the UM-ONE as the input and output device.
	Is the UM-ONE's USB indicator off?	Make sure that the UM-ONE is connected to the computer correctly. If the problem is not resolved, reinstall the driver (p. 9).
	Did you make a mistake when connecting the MIDI IN cable (CONNECT TO MIDI OUT) and MIDI OUT cable (CONNECT TO MIDI IN)?	Connect the MIDI IN cable (CONNECT TO MIDI OUT) to a MIDI OUT connector, and connect the MIDI OUT cable (CONNECT TO MIDI IN) to a MIDI IN connector.
	Is the sound module connected to the MIDI OUT cable receiving MIDI signals?	Confirm the settings of the sound module.
	Did the computer enter standby (suspend) mode, hibernate mode, or sleep mode while the UM-ONE was connected?	Exit all programs that are using the UM-ONE, disconnect the UM-ONE's USB cable, and then reconnect it. If the problem is not resolved, restart the computer.

Troubleshooting

Problem	Confirmation	Resolution
Cannot play back or record	Did you disconnect and reconnect the USB cable while using the UM-ONE?	Exit all programs that are using the UM-ONE, disconnect the UM-ONE's USB cable, and then reconnect it. If the problem is not resolved, restart the computer.
	Was the UM-ONE connected to the computer while the computer was starting up?	Connect the UM-ONE after the computer has started up. (For some computers, the UM-ONE cannot be used if it is connected to the computer while the computer is starting up.)
	Did the computer handle a processor-intensive task while you were using the UM-ONE?	Stop playback or recording, and then try playing back or recording again. If the problem is not resolved, exit all programs that are using the UM-ONE, disconnect the UM-ONE's USB cable, and then reconnect it.
Duplicate notes sound	Is the sound module set to Local On? Is the software's THRU function turned on?	Configure as follows. Sound module: Local Off Software's THRU function: Off For details, refer to the owner's manual for the equipment you are using.
Sound is interrupted during playback, sounds are missing	Are multiple programs running?	Exit programs that are not in use.
	Is the system software up to date?	Run Windows Update or Microsoft Update and make sure the system software is up to date.
	Are you using Mac OS X Software Update?	Run Software Update and make sure the system software is up to date.
	Are the drivers for the computer's internal chipset and graphics card up to date?	Update to the latest drivers.
	Is the UM-ONE connected to a USB hub?	Connect the UM-ONE directly to one of the computer's USB connectors.
	Did you try to play back or record immediately after the computer started up or after waking up from sleep mode?	Wait and try playing back or recording later.

Main Specifications

UM-ONE: USB MIDI Interface

Connectors	MIDI IN Cable (CONNECT TO MIDI OUT) x 1 (16 MIDI Channels) MIDI OUT Cable (CONNECT TO MIDI IN) x 1 (16 MIDI Channels) USB Cable
Indicators	USB Indicator
	MIDI IN Indicator
	MIDI OUT Indicator
Power Supply	Supplied from the computer
Current Draw	70 mA
Dimensions	60.2 (W) x 30 (D) x 14 (H) mm
	2-3/8 x 1-3/16 x 9/16 inches (main unit only)
Weight	100 g/4 oz (main unit only)
Accessories	Owner's Manual
	(If any accessories are missing, please contact the place of purchase.)

* In the interest of product improvement, the specifications, appearance, and/or contents of this unit are subject to change without prior notice.

For EU Countries



- UK** This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste.
- DE** Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt von Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit den Hausmüll entsorgt werden.
- FR** Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères.
- IT** Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.
- ES** Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como está regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.
- PT** Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico.
- NL** Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangeboden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verworpen.
- DK** Dette symbol angiver, at i EU-lande skal dette produkt opsamlles adskilt fra husholdningsaffald, som defineret i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald.
- NO** Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, iht. til retningslinjer for den enkelte regionen, og ikke kastes sammen med vanlig husholdningsavfall. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall.

- SE** Symbolen anger att i EU-länder måste den här produkten kasseras separat från hushållsavfall, i enlighet med varje regions bestämmelser. Produkter med den här symbolen får inte kasseras tillsammans med hushållsavfall.
- FI** Tämä merkintä ilmaisee, että tuote on EU-maissa kerättävä erillään kotitalousjätteilästä kunkin alueen voimassa olevien määräysten mukaisesti. Tällä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteiden mukana.
- HU** Ez a szimbólum azt jelenti, hogy az Európai Unióban ezt a terméket a háztartási hulladéktól elkülönítve, az adott régióban érvényes szabályozás szerint kell gyűjtteni. Az ezzel a szimbólummal ellátott termékeket nem szabad a háztartási hulladék közé dobni.
- PL** Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produktu nie należy wyrzucać z odpadami domowymi. Produkty opatrzone tym symbolem nie można utylizować razem z odpadami domowymi.
- CZ** Tento symbol udává, že v zemích EU musí být tento výrobek sbírán odděleně od domácího odpadu, jak je určeno pro každý region. Výrobek nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem.
- SK** Tento symbol vyjadruje, že v krajinách EÚ sa musí zber tohto produktu vykonávať oddelene od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhazovať spolu s domovým odpadom.
- EE** See sümbol näitab, et EL-i maades tuleb see toode olemprügist eraldi koguda, nii nagu on igas piirkonnas määratletud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olmeprügiga.
- LT** Šis simbolis rodo, kad ES šalys šis produktas turi būti surenkamas atskirai nuo buitinių atliekų, kaip nustatyta kiekviename regione. Šiuo simboliu paženklinoti produktai neturi būti išmetami kartu su buitinių atliekais.
- LV** Šis simbols norāda, ka ES valstīs šo produktu jāievāc atsevišķi no mājsaimniecības atkritumiem, kā noteikts katrā reģionā. Produkts ar šo simbolu nedrīkst izmest kopā ar mājsaimniecības atkritumiem.
- SI** Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno od gospodinskih odpadkov, tako kot je določeno v vsaki regiji. Proizvoda s tem znakom ni dovoljeno odlagati skupaj z gospodinskimi odpadki.
- GR** Το σύμβολο αυτό υποδηλώνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προϊόν πρέπει να συλλέγεται χωριστά από τα υπόλοιπα οικιακά απορρίμματα, σύμφωνα με όσα προβλέπονται σε κάθε περιοχή. Τα προϊόντα που φέρουν το συγκεκριμένο σύμβολο δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα.

For China

有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。
本资料适用于2007年3月1日以后本公司所制造的产品。

环保使用期限



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年数。所谓环保使用期限是指在自制造日起的规定期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。
环保使用期限仅在遵照产品使用说明书，正确使用产品的条件下才有效。
不当的使用，将会导致有害物质泄漏的危险。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
外壳 (壳体)	×	○	○	○	○	○
电子部件 (印刷电路板等)	×	○	×	○	○	○
附件 (电源线、交流适配器等)	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。

×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572的限量要求。
(企业可在此处，根据实际情况对上表中打“×”的技术原因进行进一步说明。)

For the USA

DECLARATION OF CONFORMITY Compliance Information Statement

Model Name : UM-ONE
Type of Equipment : USB MIDI Interface
Responsible Party : Roland Corporation U.S.
Address : 5100 S. Eastarn Avenue, Los Angeles, CA 90040-2938
Telephone : (323) 890-3700

For the USA

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment requires shielded interface cables in order to meet FCC class B limit.

Any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For Canada

CAN ICES (B)/NMB (B)

For EU Countries

Manufacturer: Roland Corporation
1-6-4 Shinmiyakoda, Hamana-ku, Hamamatsu, Shizuoka 431-2103, JAPAN
Importer: Roland Europe Group Limited
Hive 2, 1530 Arlington Business Park, Theale, Reading, Berkshire. RG7 4SA United Kingdom
Responsible Person/Authorized Representative: Roland Central Europe N.V
ENA 23 Zone 1 nr. 1620 Klaus-Michael Kuehnlaan 13, 2440 Geel, BELGIUM



For the U.K.

Manufacturer: Roland Corporation
1-6-4 Shinmiyakoda, Hamana-ku, Hamamatsu, Shizuoka 431-2103, JAPAN
Importer: Roland Europe Group Limited
Hive 2, 1530 Arlington Business Park, Theale, Reading, Berkshire. RG7 4SA United Kingdom





Roland Service Centers and Distributors

When you need repair service, access this URL and find your nearest Roland Service Center or authorized Roland distributor in your country.

<https://roland.cm/service>



* 5 1 0 0 0 1 7 8 5 8 - 0 9 *